
ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT


2.0 HR

APPROXIMATE ASSEMBLY TIME

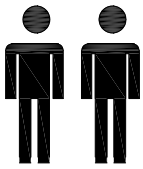


2 PERSON ASSEMBLY

FLOOR AREA
1.1M X 2.6M

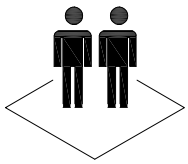


REQUIRED ASSEMBLY SPACE

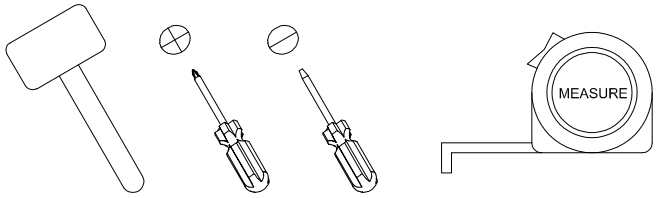

REQUIRED ASSEMBLY TOOLS (NOT PROVIDED)

ASSEMBLED DIMENSION

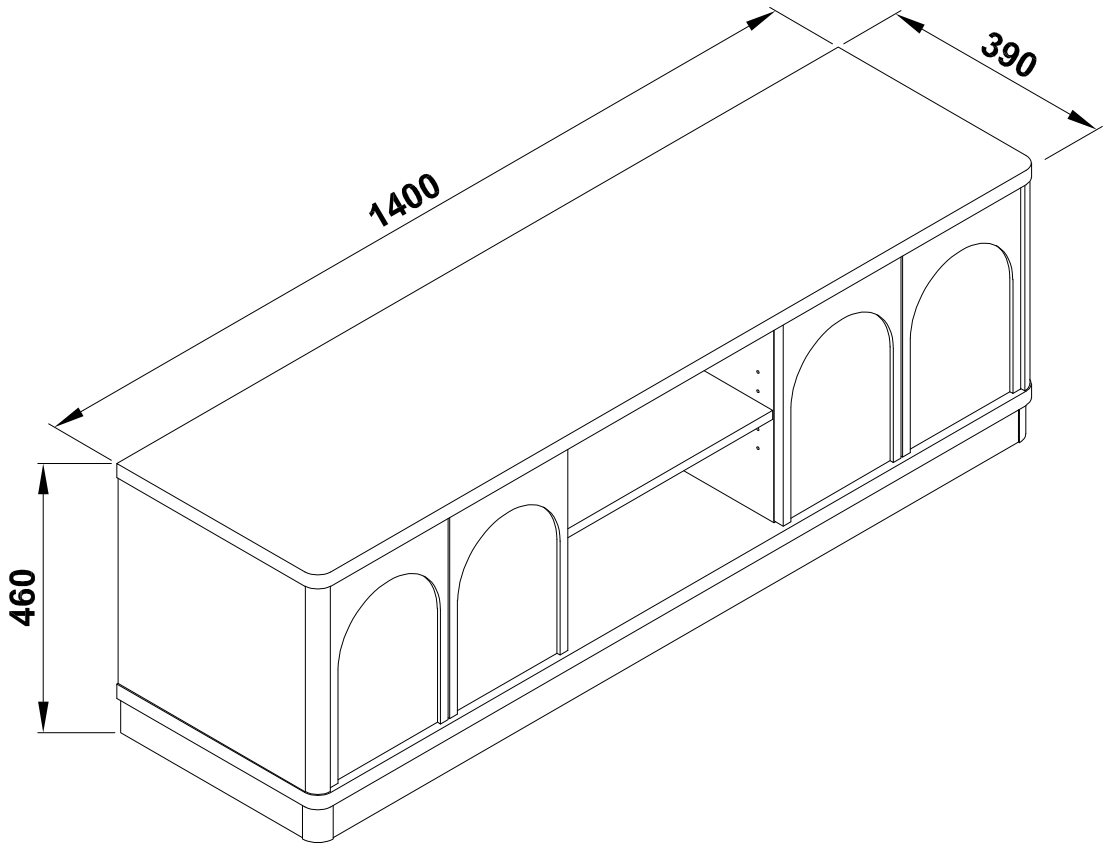

ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT

WARNING : ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. Always secure this product with an anchor device to the wall or suitable surface. Wall fixing hardware are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Your product has been provided with a permanent safety label that should never be removed for safety reasons.




For more information please visit www.productsafety.gov.au

ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT


PART LIST

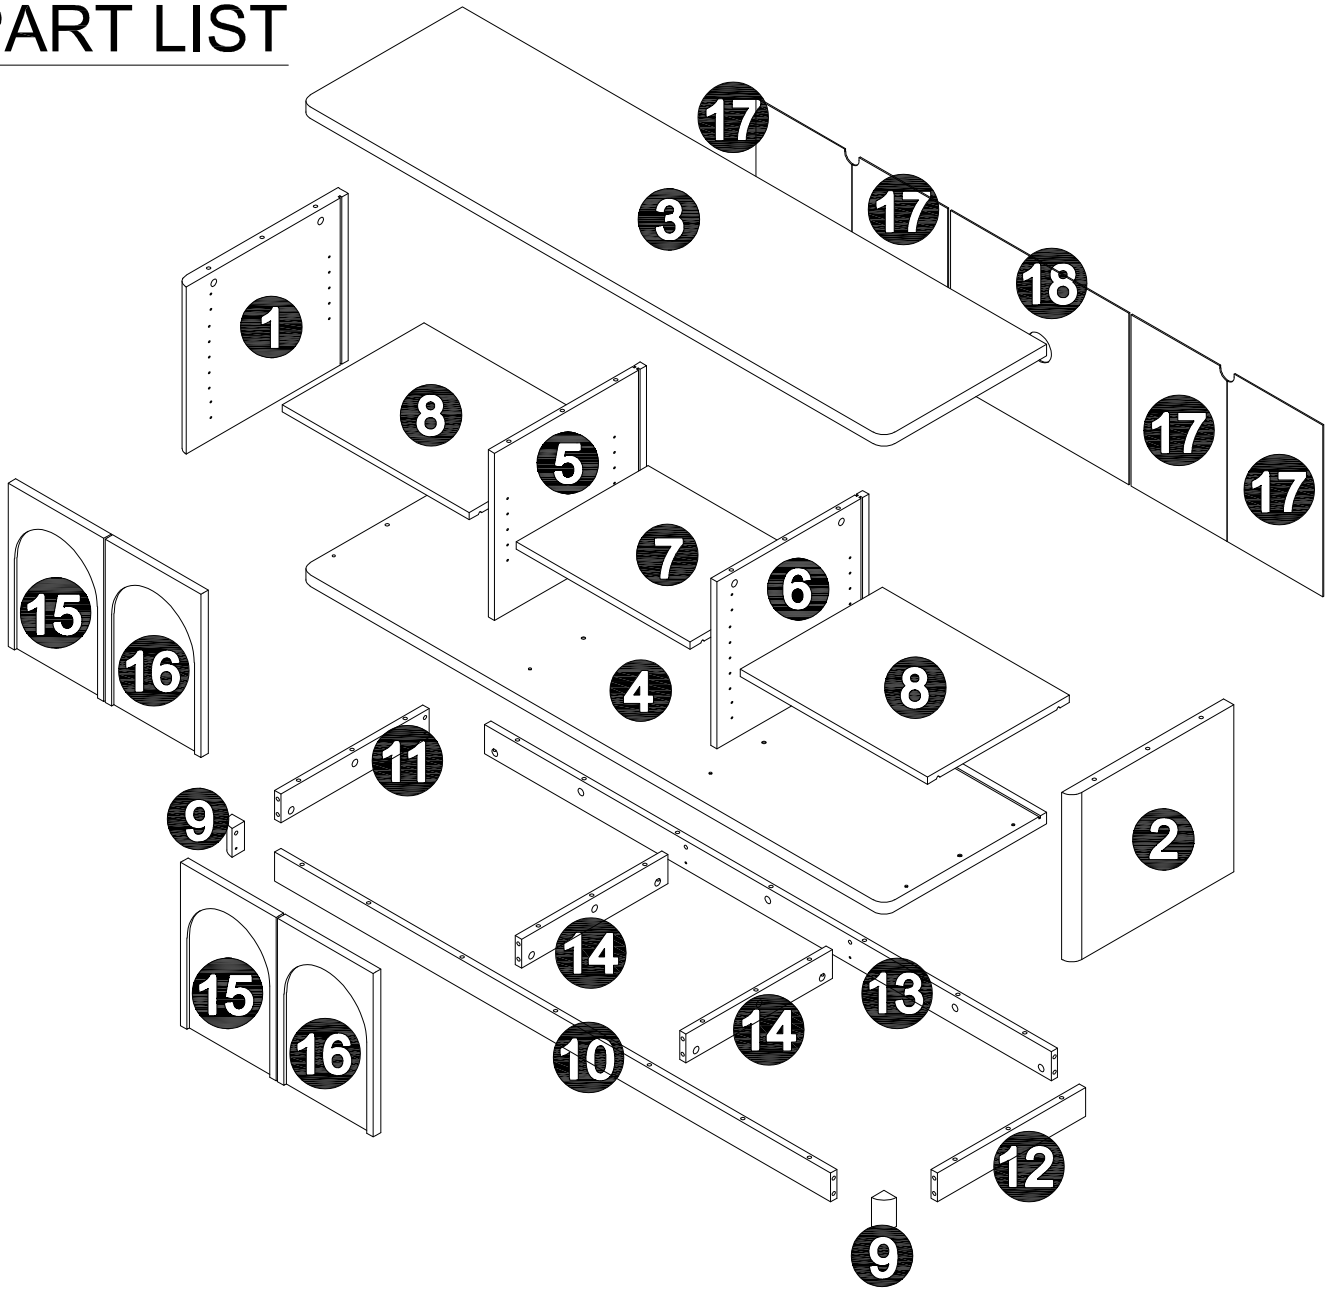

NO.	PARTS LIST	QTY	NO.	PARTS LIST	QTY
(1)	PART 1	1	(10)	PART 10	1
(2)	PART 2	1	(11)	PART 11	1
(3)	PART 3	1	(12)	PART 12	1
(4)	PART 4	1	(13)	PART 13	1
(5)	PART 5	1	(14)	PART 14	2
(6)	PART 6	1	(15)	PART 15	2
(7)	PART 7	1	(16)	PART 16	2
(8)	PART 8	2	(17)	PART 17	4
(9)	PART 9	2	(18)	PART 18	1

ASSEMBLY INSTRUCTION	DESCRIPTION: 7396 CRANFIELD TV UNIT

HARDWARE LIST

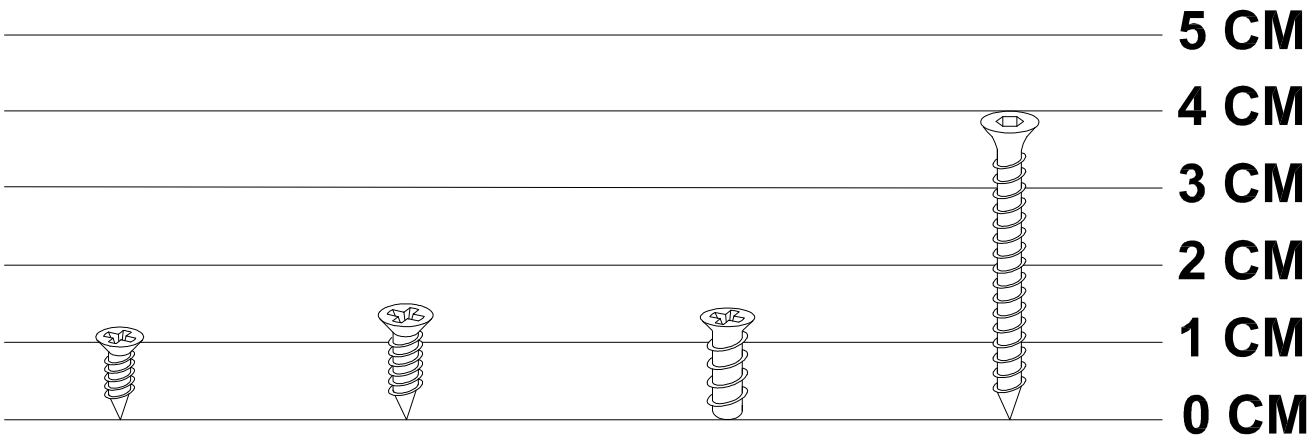


X24
M3.5 X 12MM
A
SCREW

X14
M3.5 X 15MM
B
SCREW

X16
M6 X 13MM
C
SCREW

X8
M6 X 40MM
D
SCREW

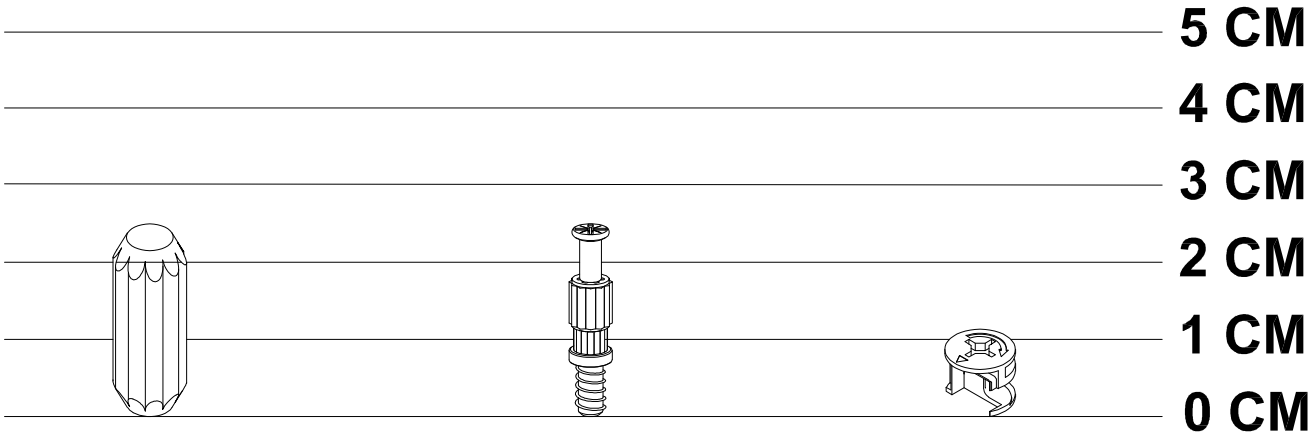

X34
Ø8 X 25MM
E
WOOD
DOWEL

X28
20 X 5MM
F
BOLT
DOWEL

X28
Ø15 X 12MM
G
CAM

ASSEMBLY INSTRUCTION	DESCRIPTION: 7396 CRANFIELD TV UNIT


HARDWARE LIST



X4

H


WASHER
(M5)



X4 SETS

J


METAL SOFT CLOSE
HINGES (5/8") THIN CUP



X4 SETS

K


METAL SOFT CLOSE
HINGES (7/8") THIN CUP



X4 SETS

L


2011 PUSH OPEN
FOR DOOR



X8

M


PLASTIC LEG
STUD



X8

N


PLASTIC CAM
CAP (Ø17MM)



X12

P


METAL ADJUSTABLE
SHELF STUD



X1

Q


ALLEN KEY M4



X12

R

BACKPLY
STOPPER

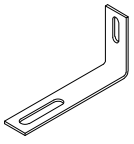

X2

S

STEEL L BRACKET (BZ)
1.5 X 76.5

ASSEMBLY INSTRUCTION	DESCRIPTION: 7396 CRANFIELD TV UNIT

Top Tips before you start!

1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.

2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for the step.

3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.

4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.

6. During assembly please take care not to over-tighten any fittings, as this may damage the product.


Care and Maintenance of your Furniture


- Please periodically check all fittings and re-tighten as necessary.
- Please do not drag or pull your furniture.
- Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not sit or stand on this item.


Special Tips for Fitting Minifix Cam (Cam-Lock), and Minifix Bolt (Cam-Bolts)

CAM-BOLT


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below).

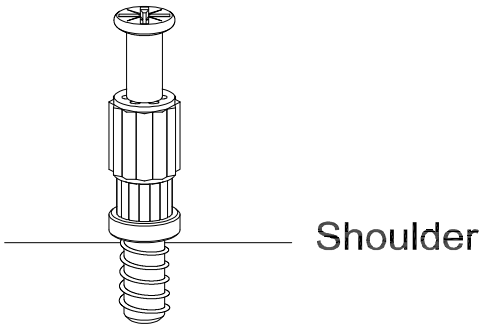


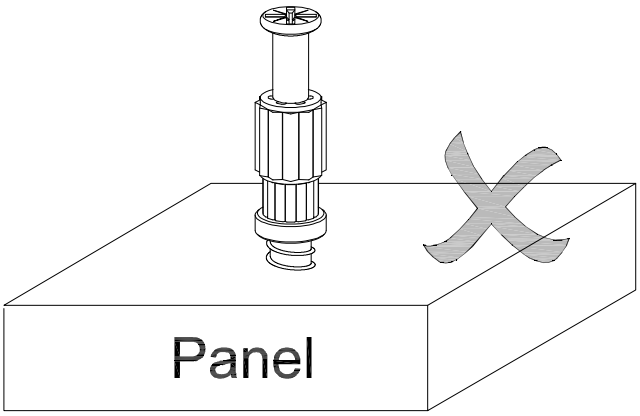


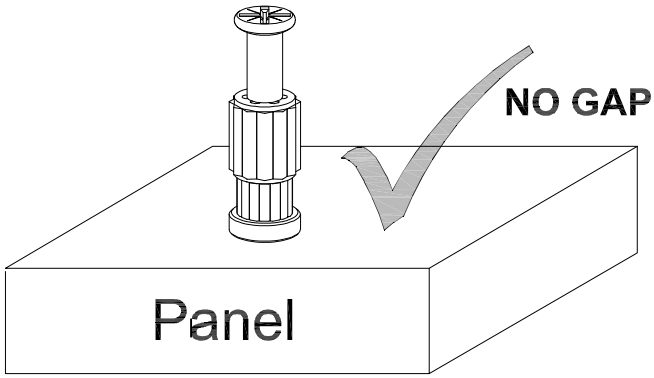

CAM-LOCK

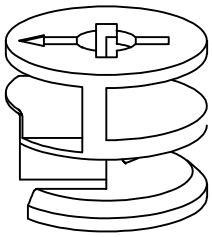

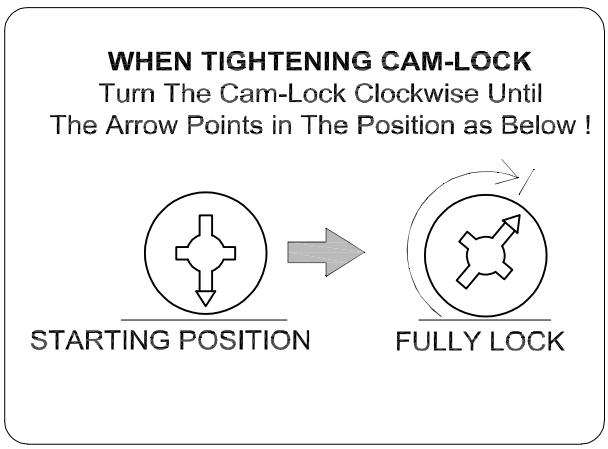


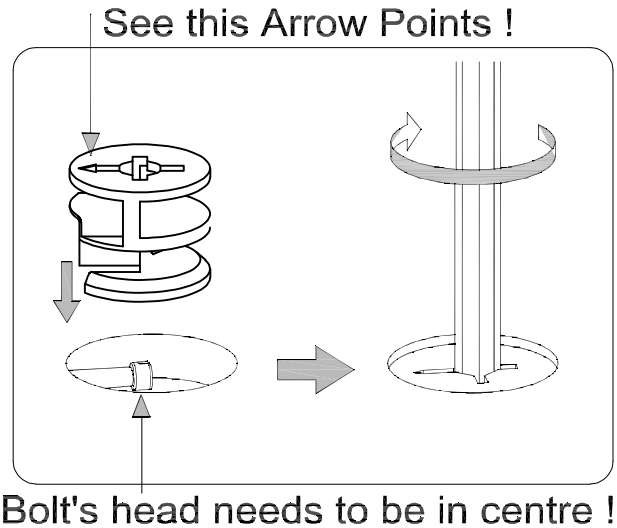



ASSEMBLY INSTRUCTION


DESCRIPTION:
7396
CRANFIELD TV UNIT


STEP 1

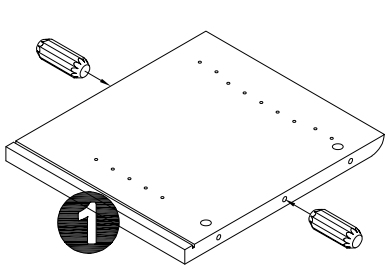


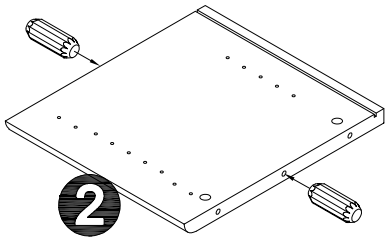


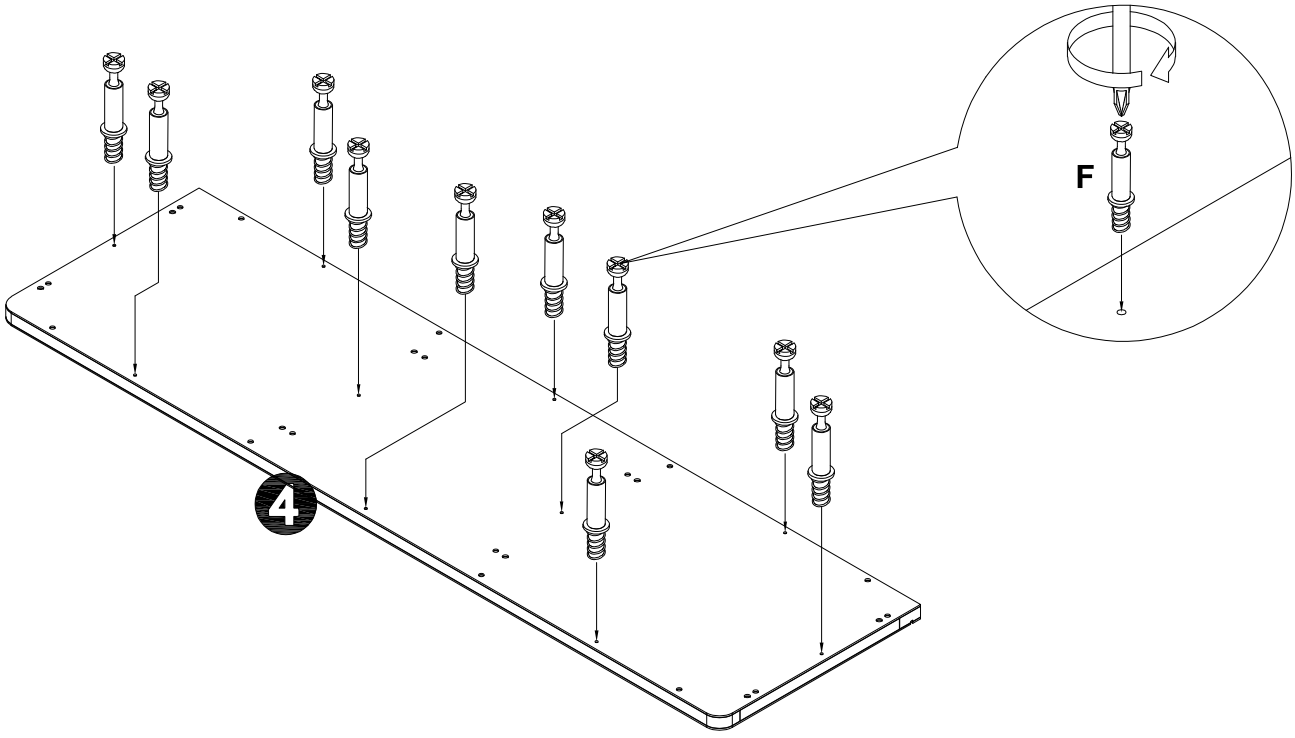

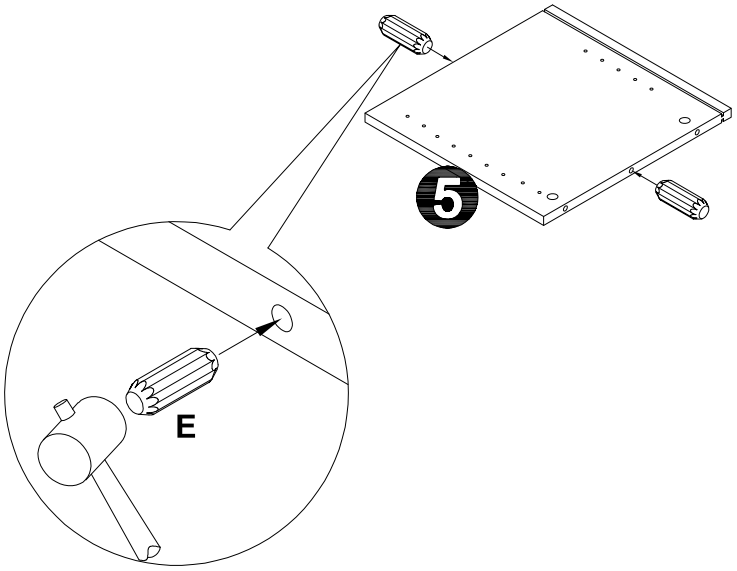

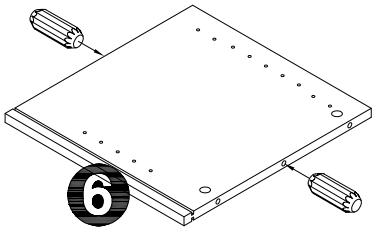

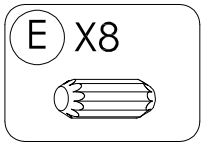


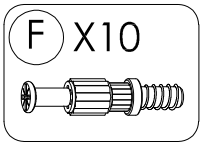

ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT


STEP 2

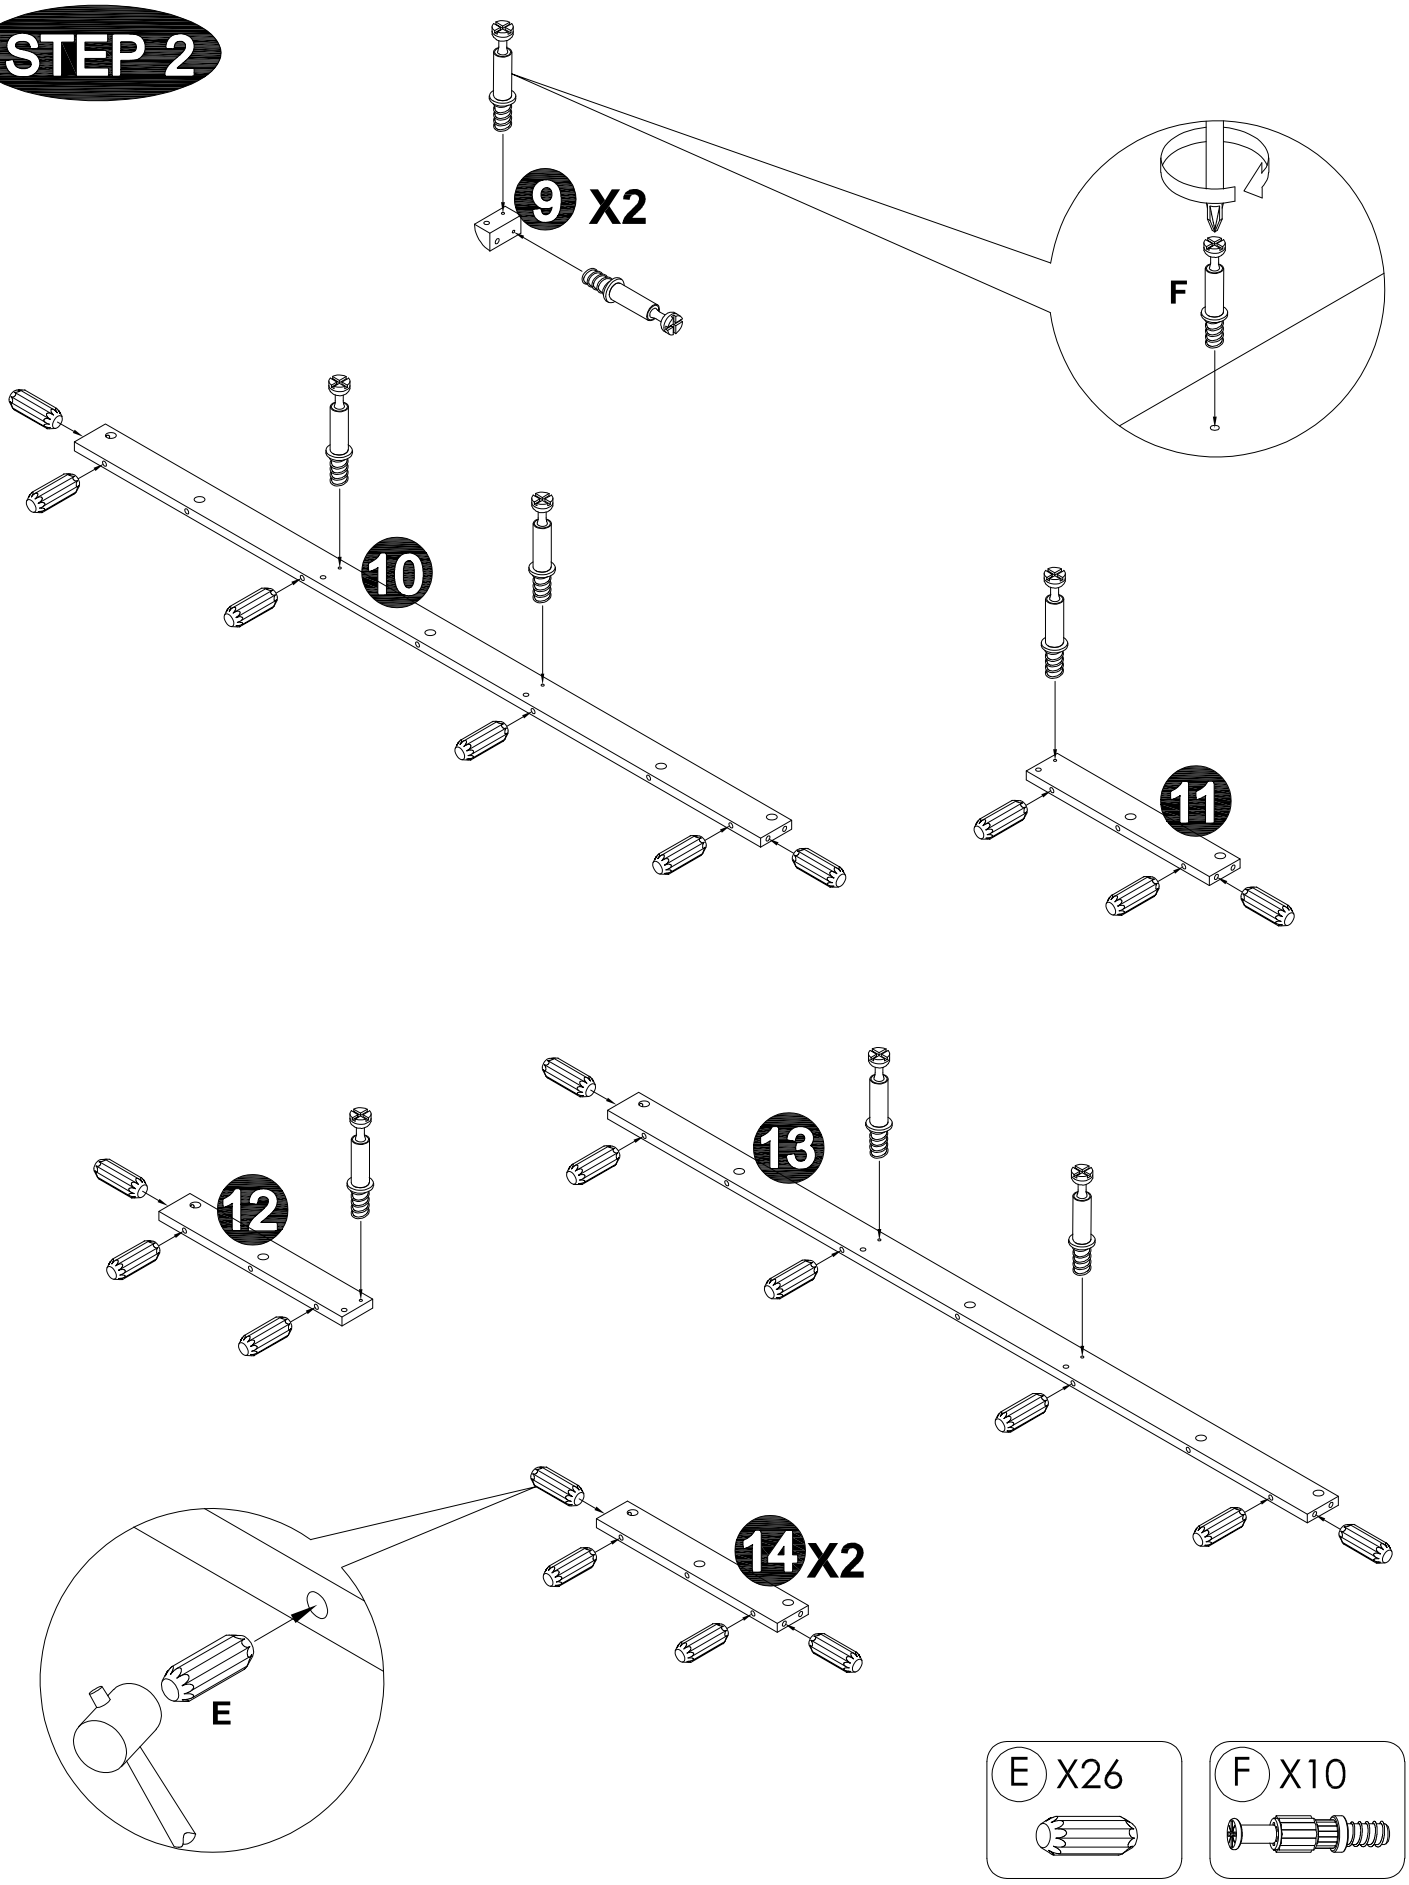


ASSEMBLY INSTRUCTION


DESCRIPTION:
7396
CRANFIELD TV UNIT

STEP 3

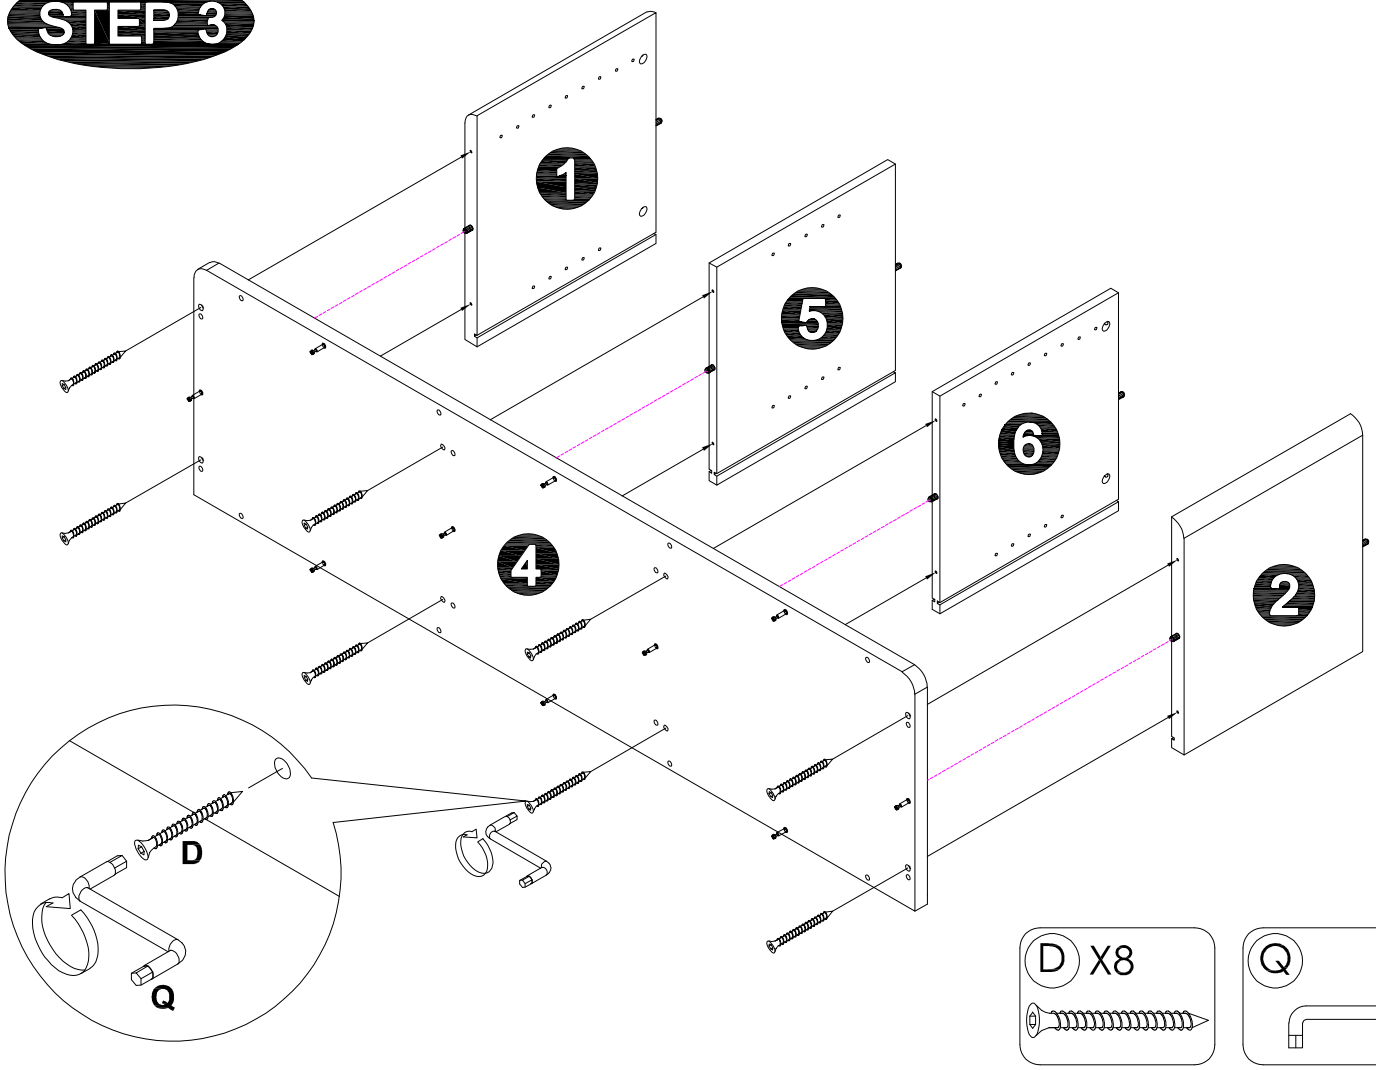

STEP 4

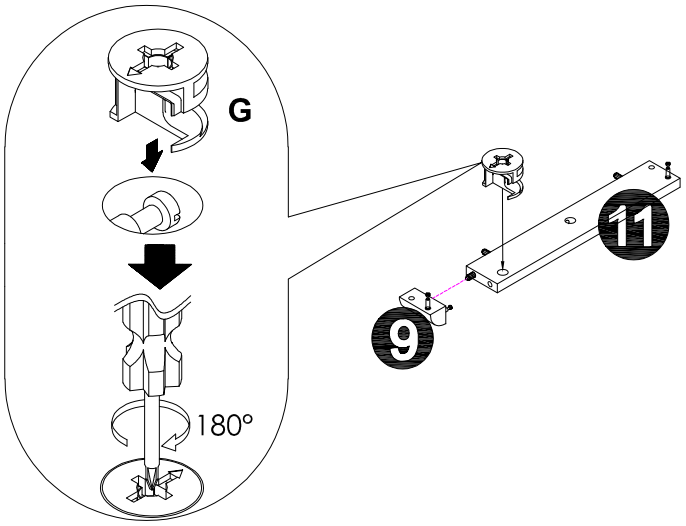


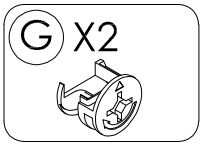


ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT


STEP 5

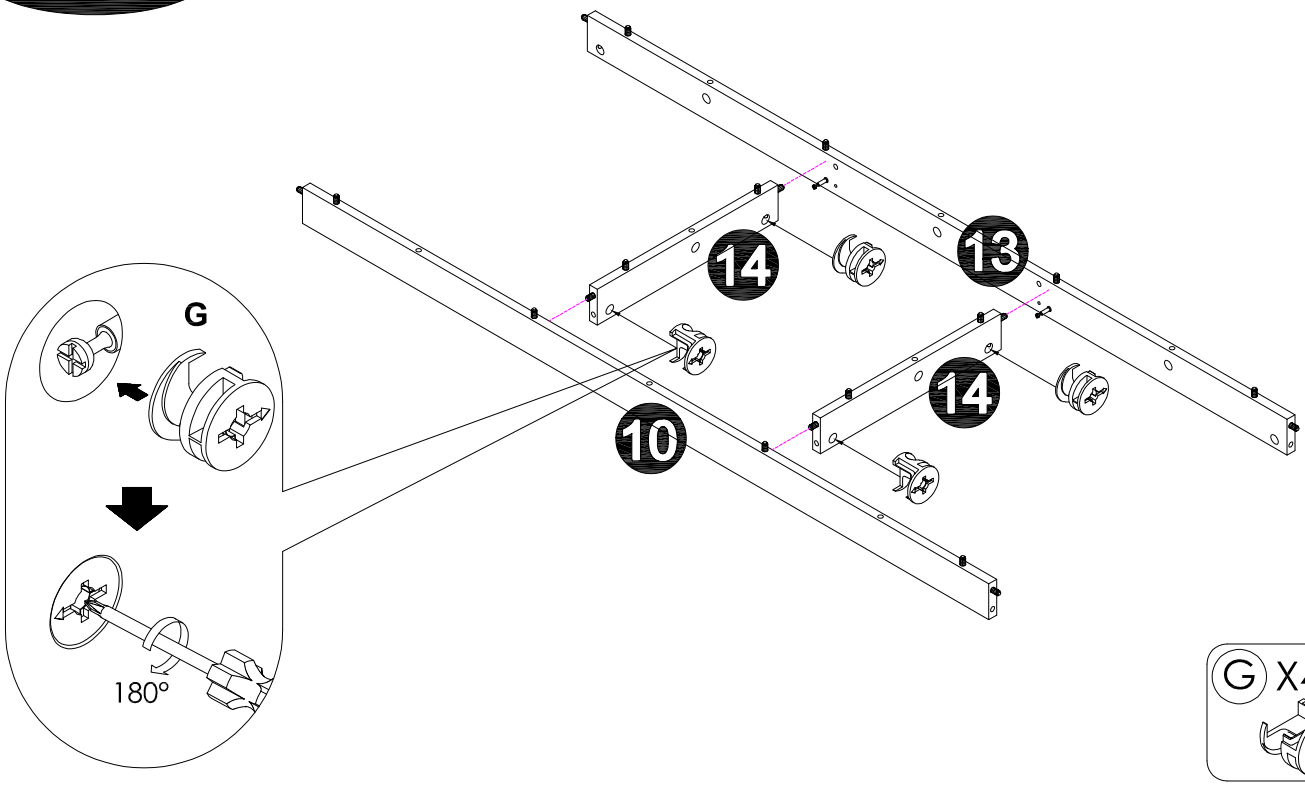


G X4

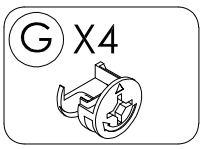

STEP 6

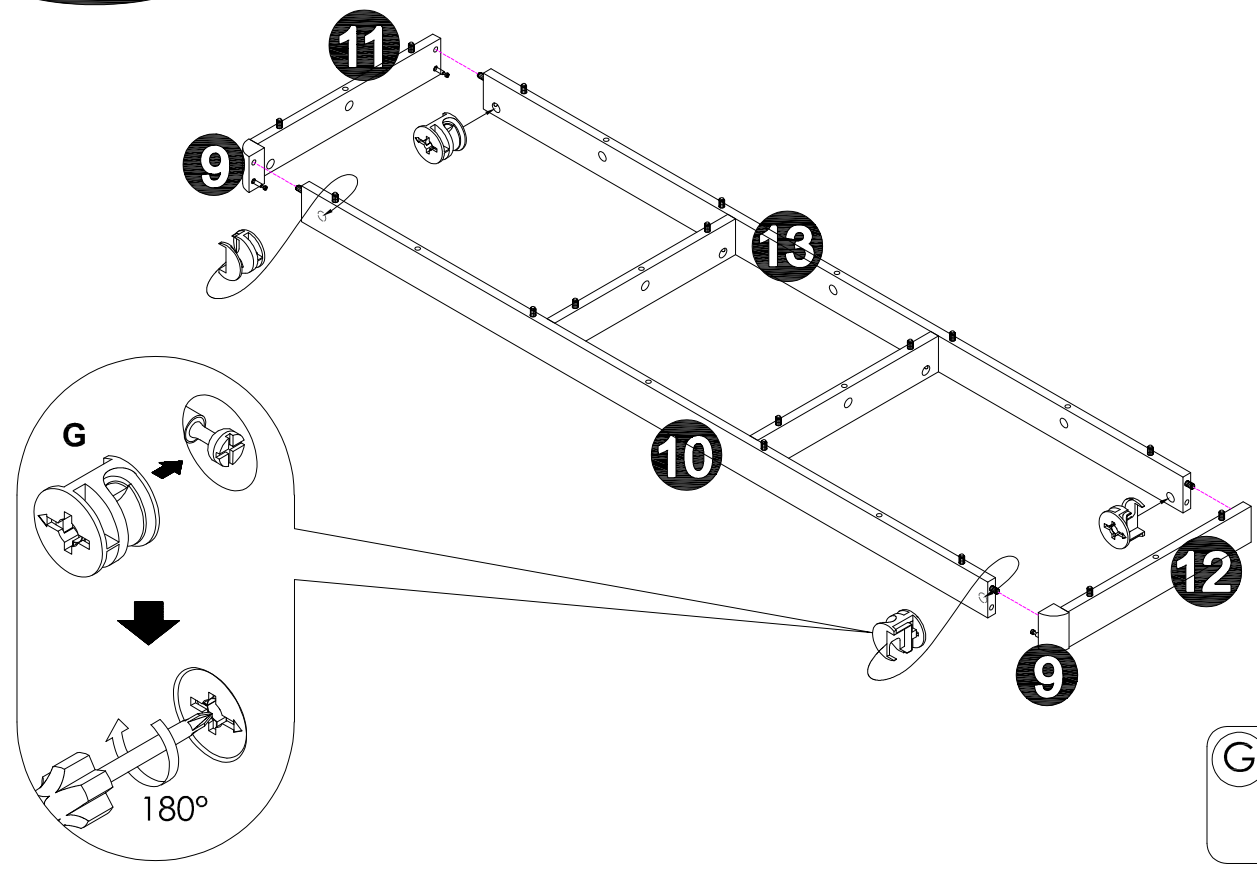


G X4

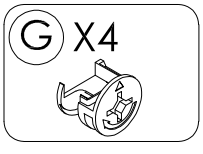



ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT

STEP 7

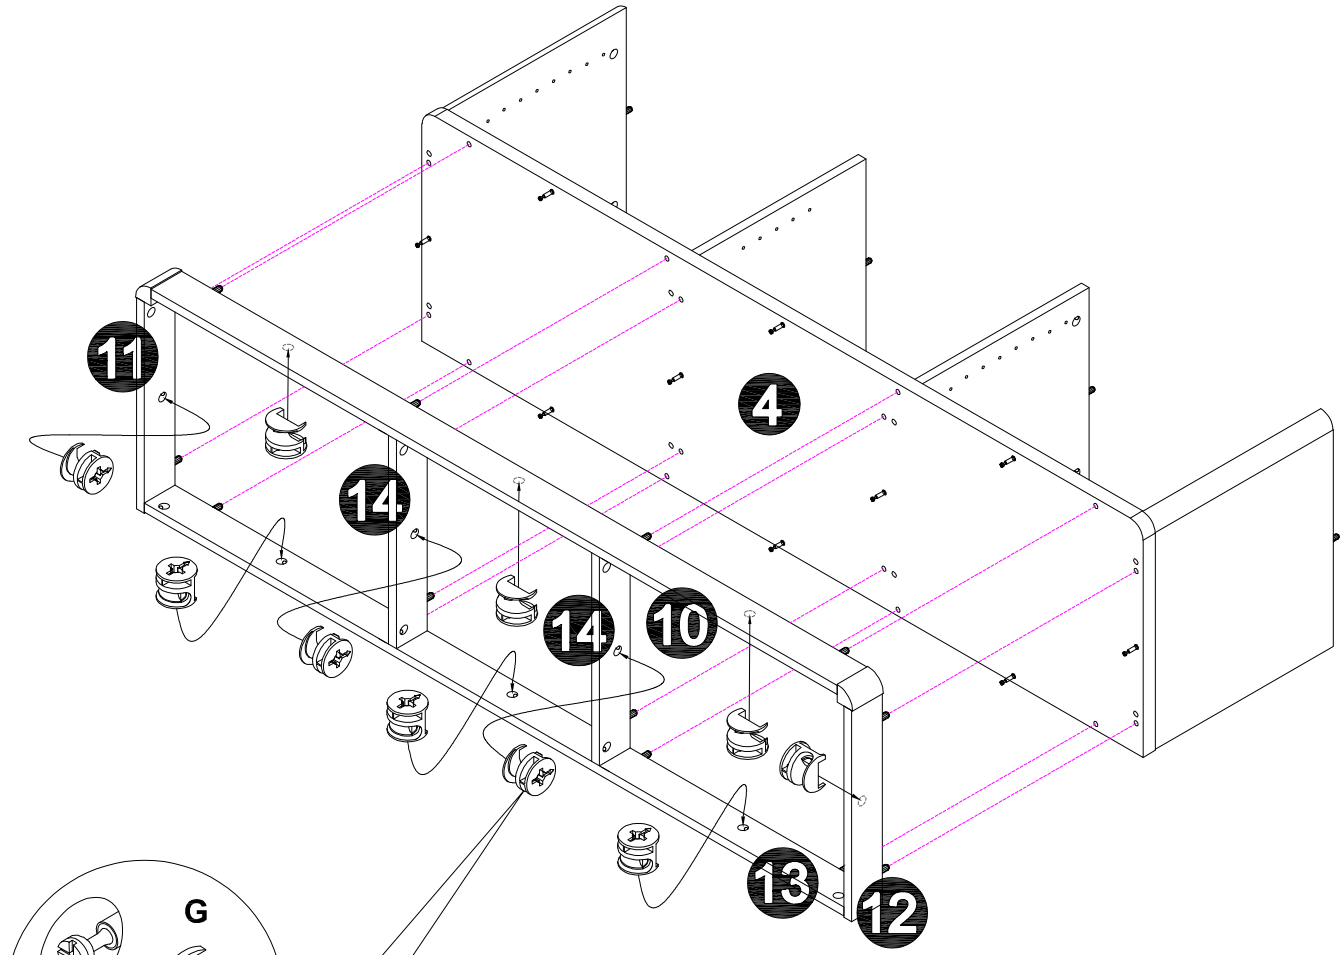

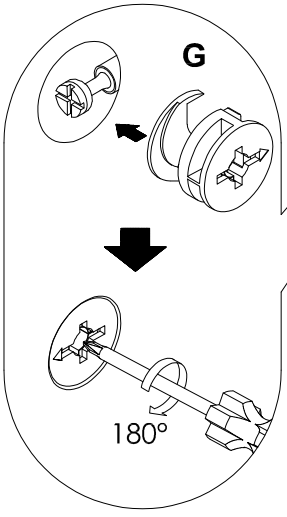


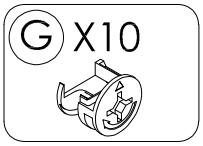


ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT

STEP 8

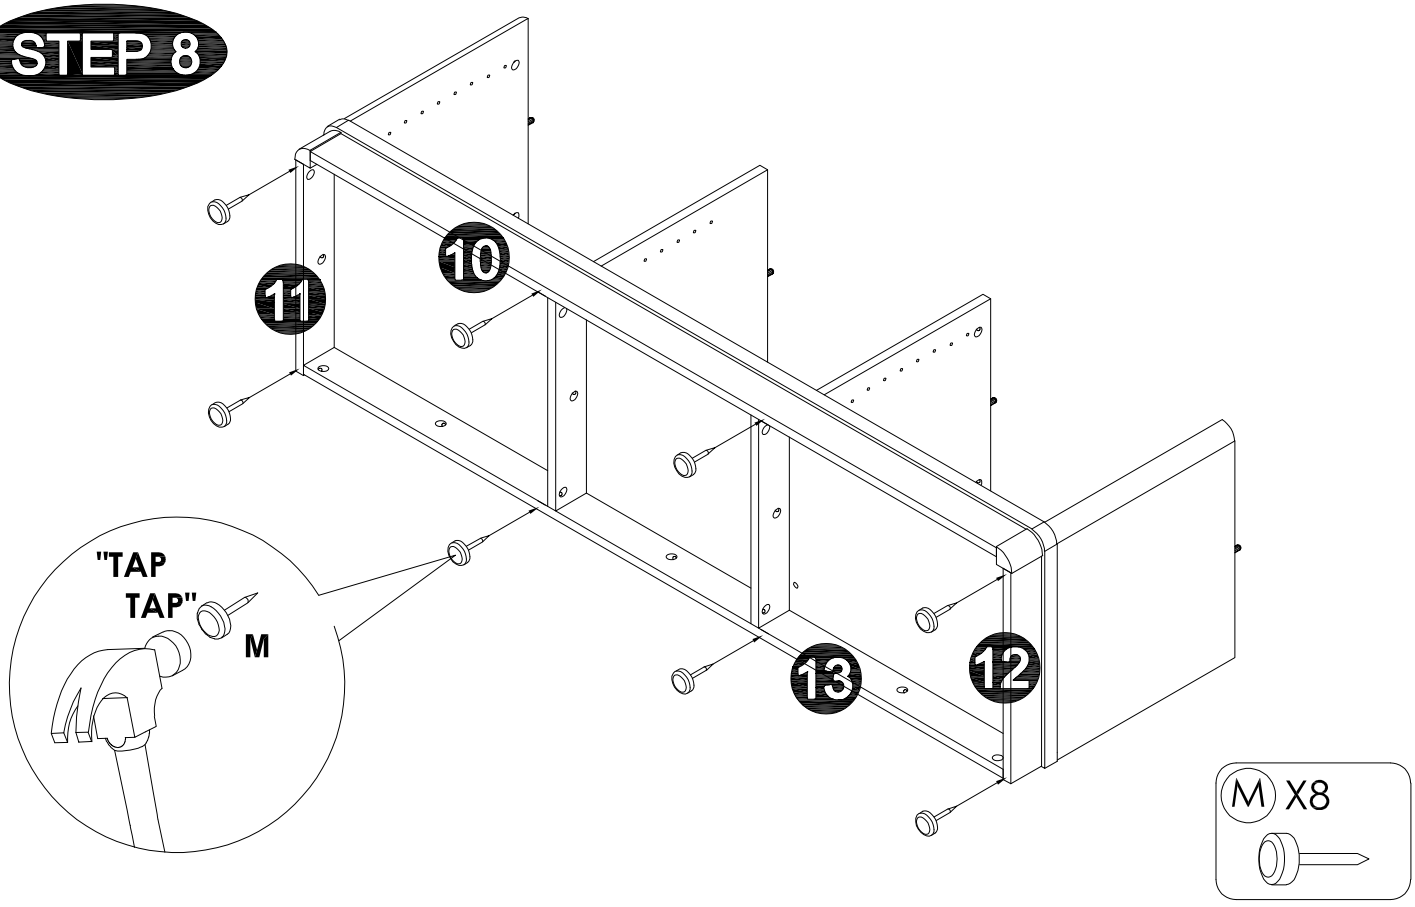


STEP 9

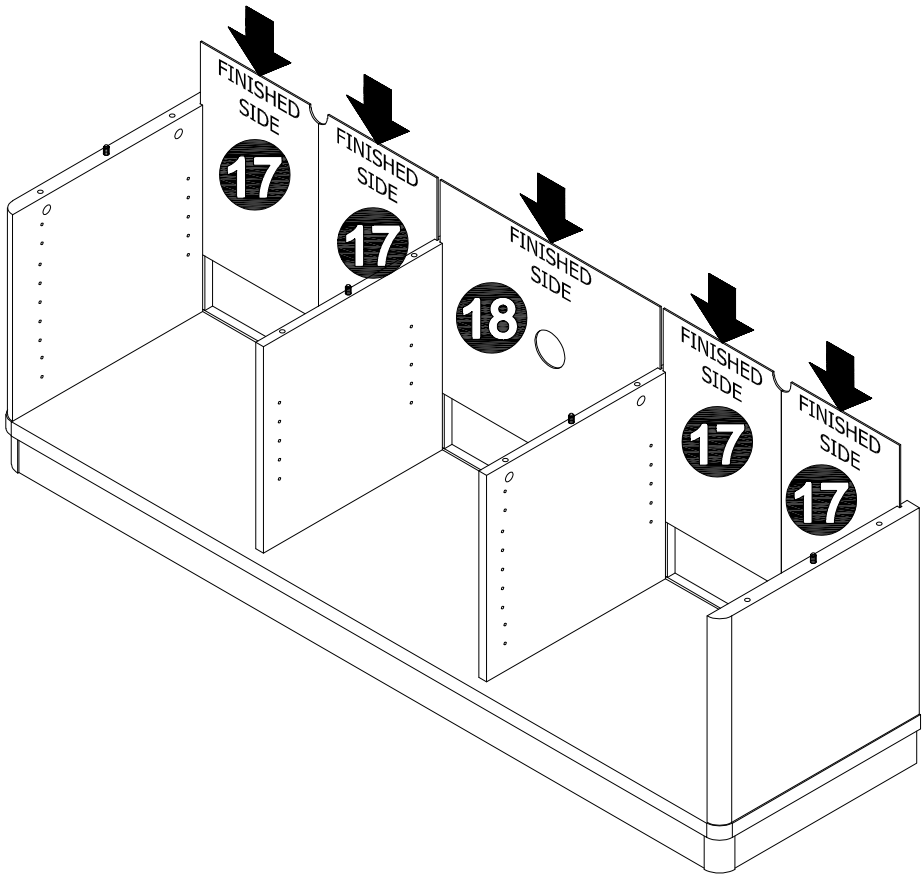


ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT

STEP 10

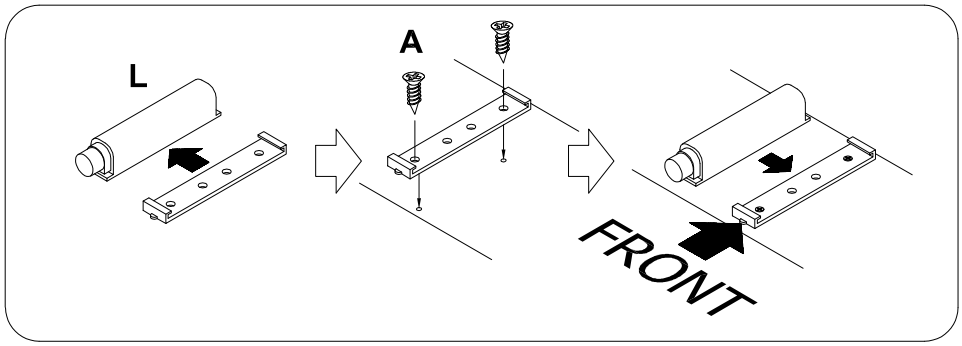

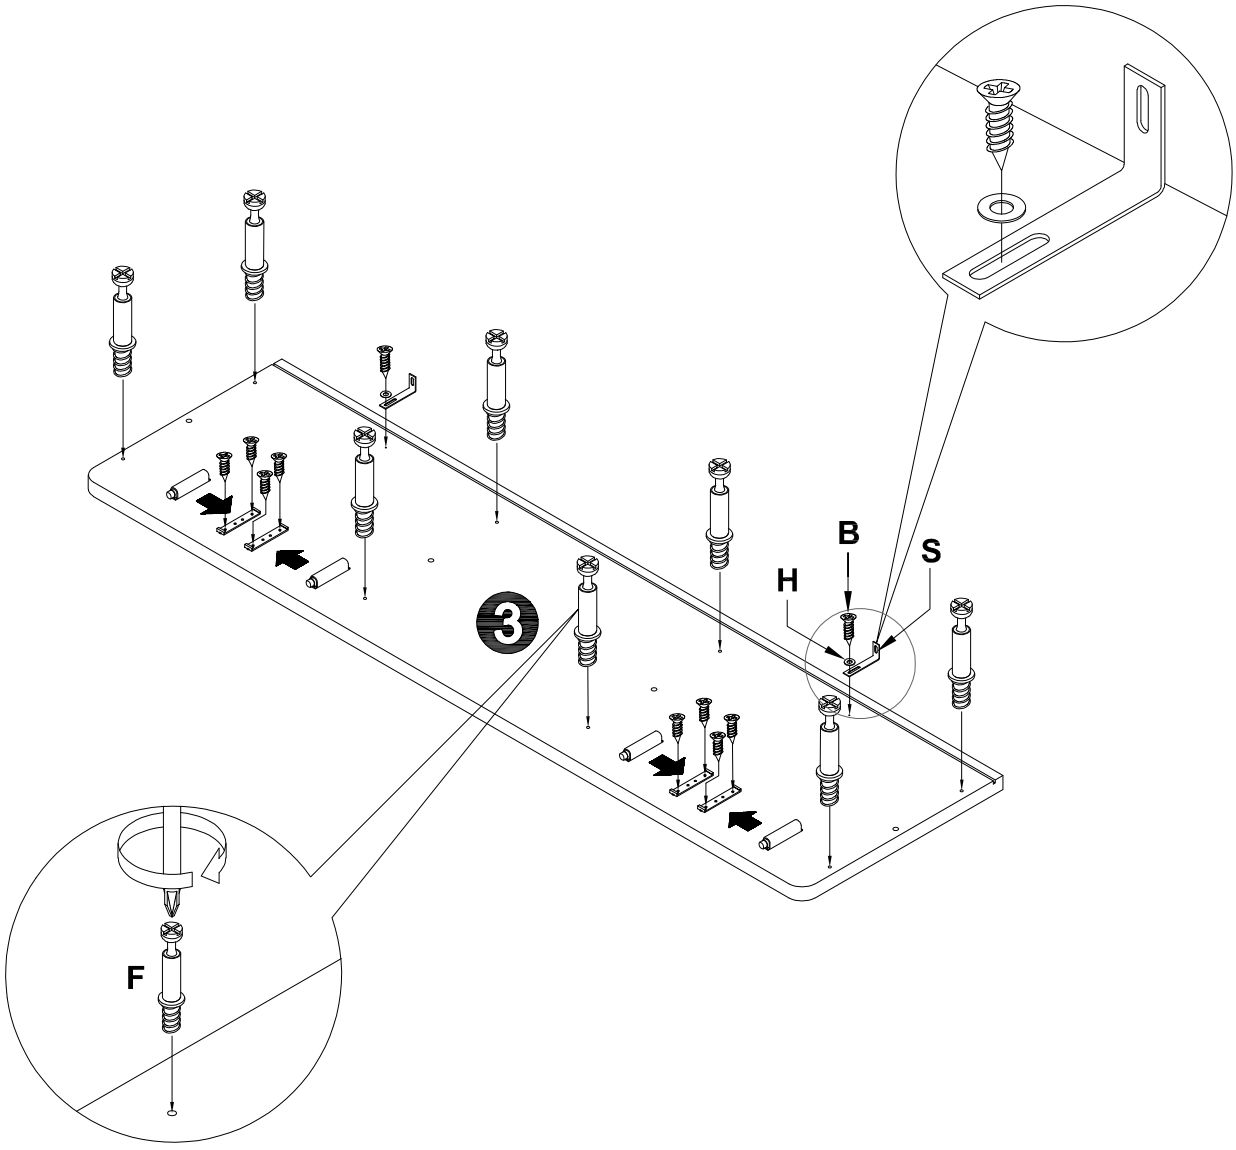



A X8	B X2	F X8	H X2	L X4	S X2

ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT

STEP 11

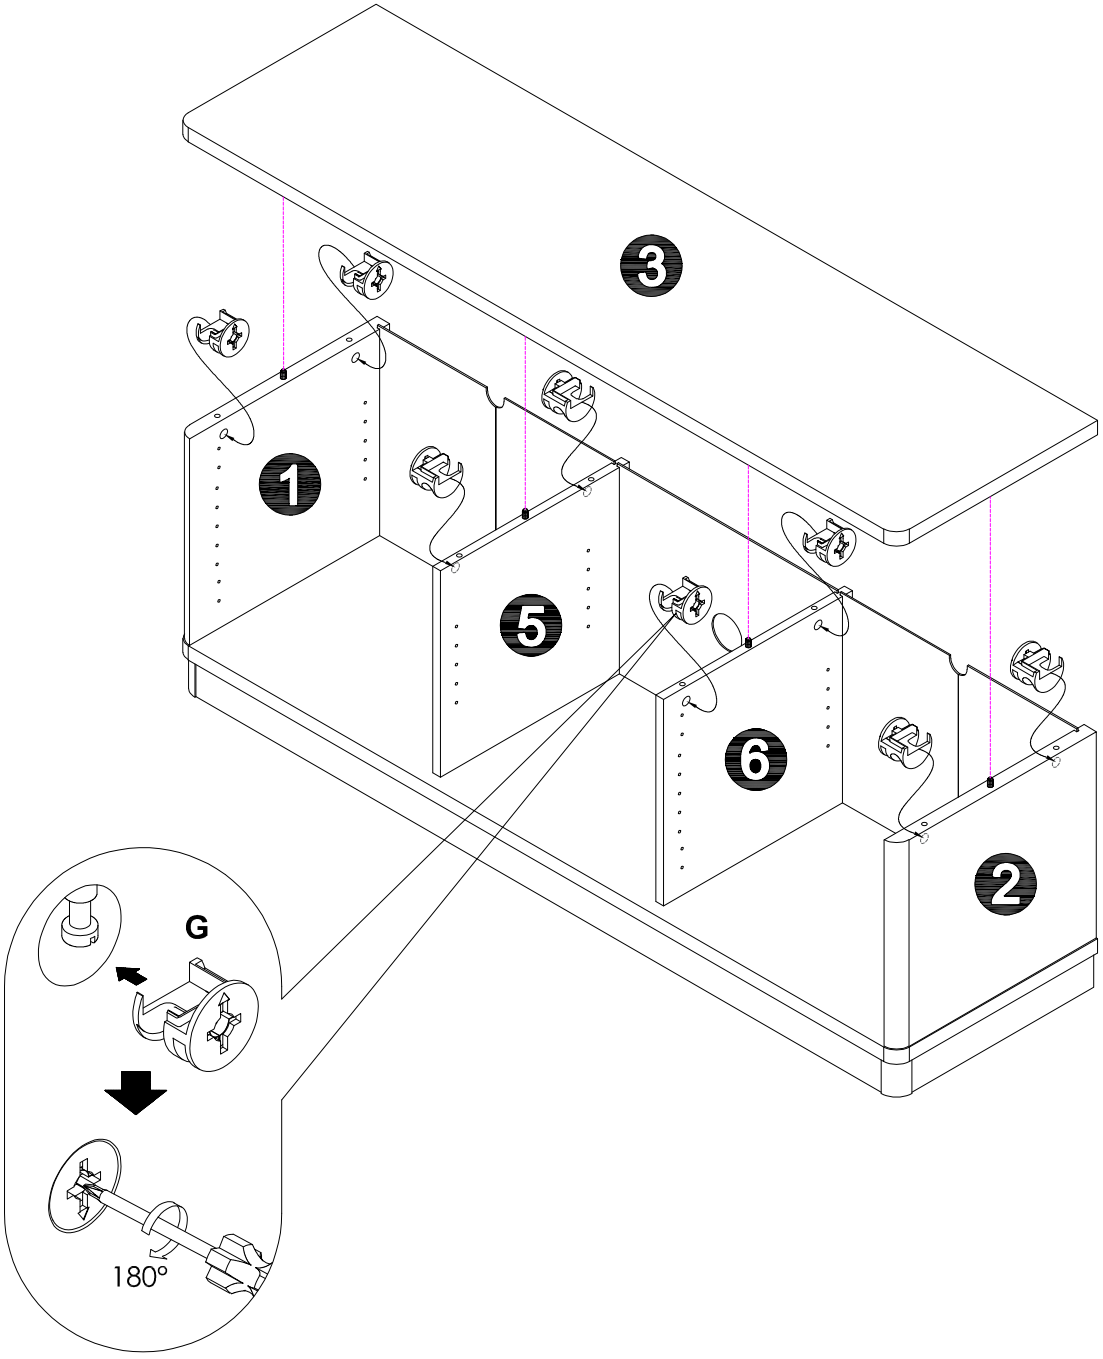


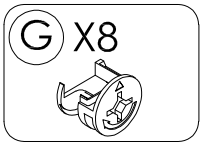


ASSEMBLY INSTRUCTION


DESCRIPTION:
7396
CRANFIELD TV UNIT

STEP 12

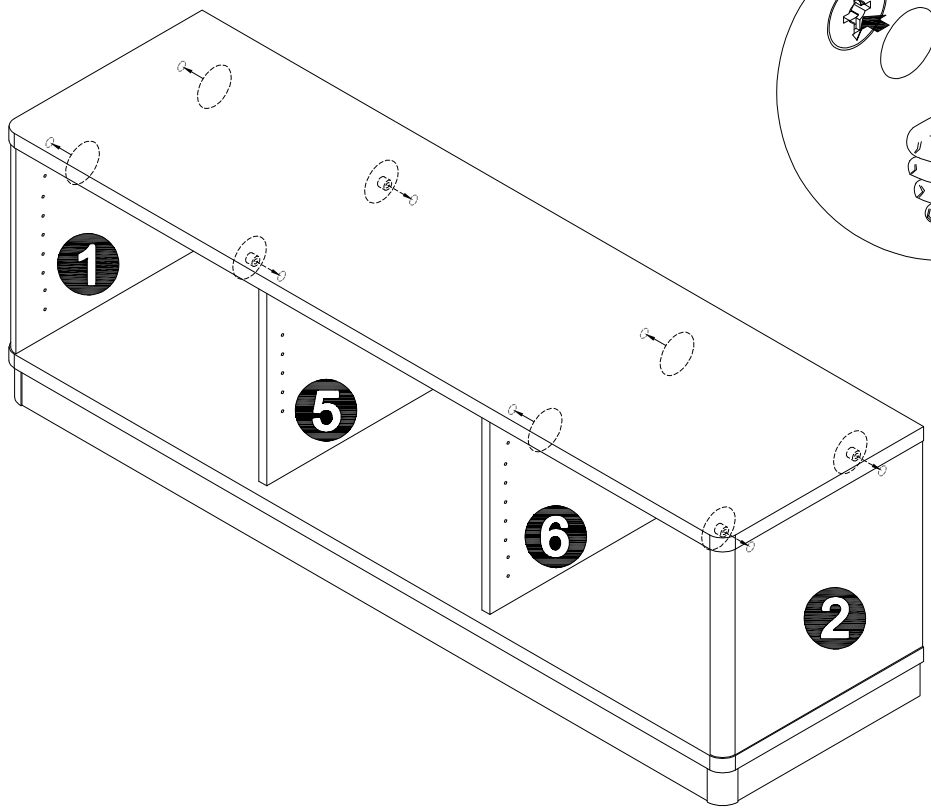


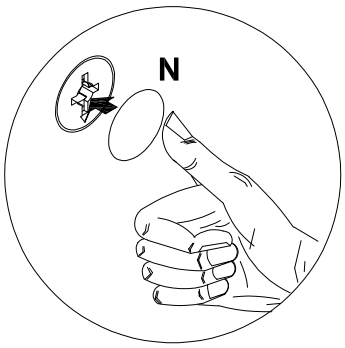


N X8

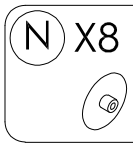


STEP 13

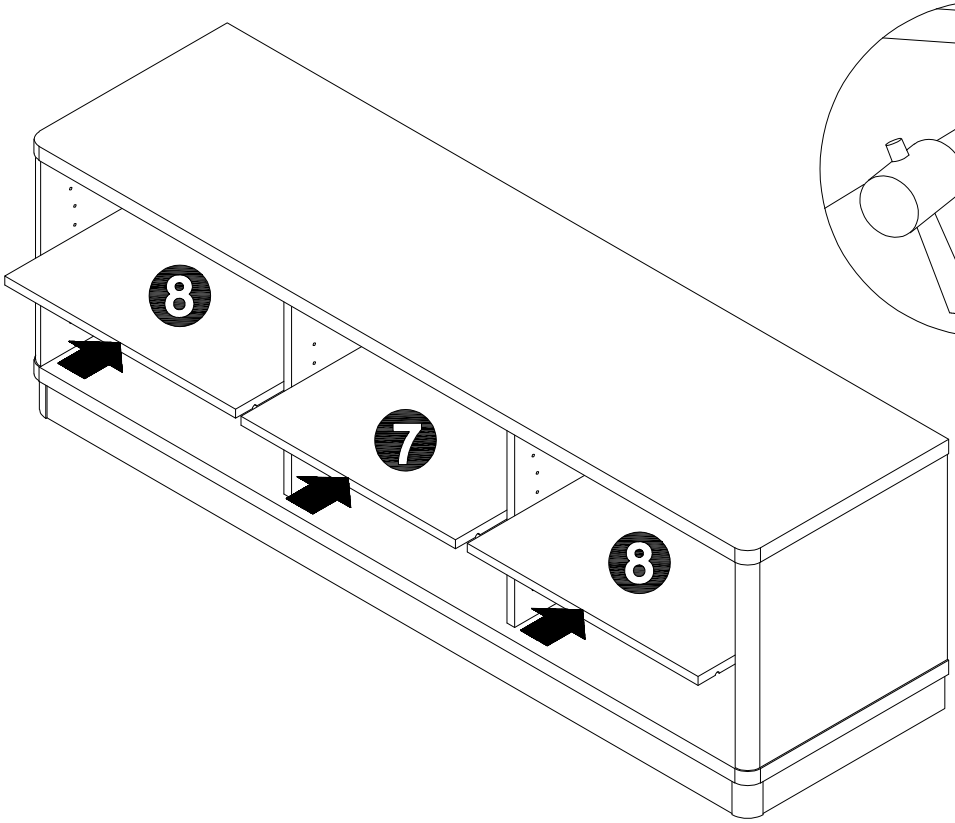

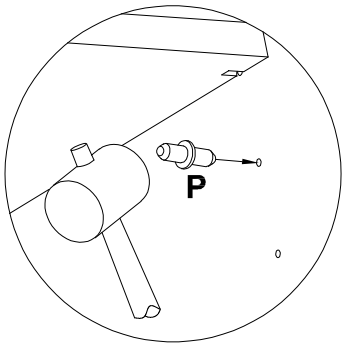


P X12





ASSEMBLY INSTRUCTION


DESCRIPTION:
7396
CRANFIELD TV UNIT

STEP 14

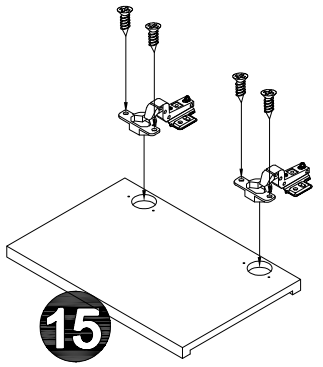

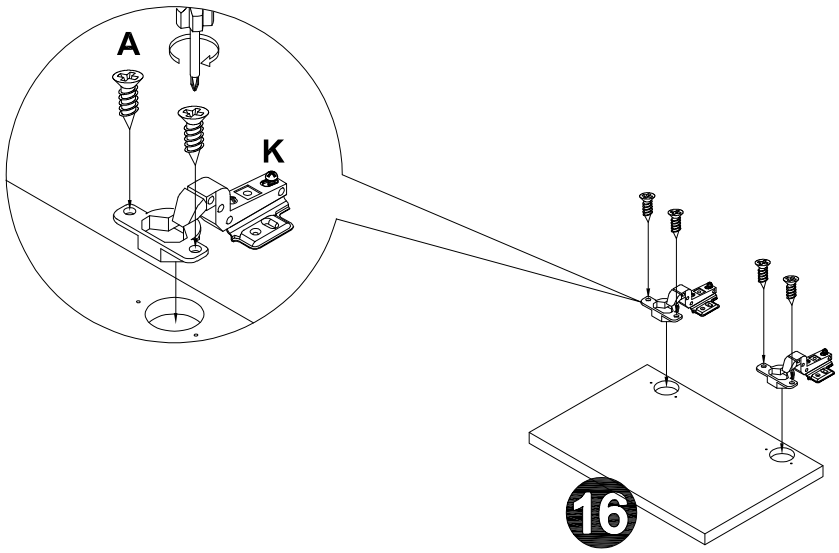

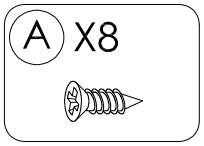


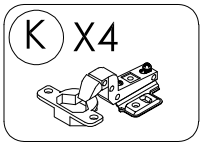


ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT


STEP 15

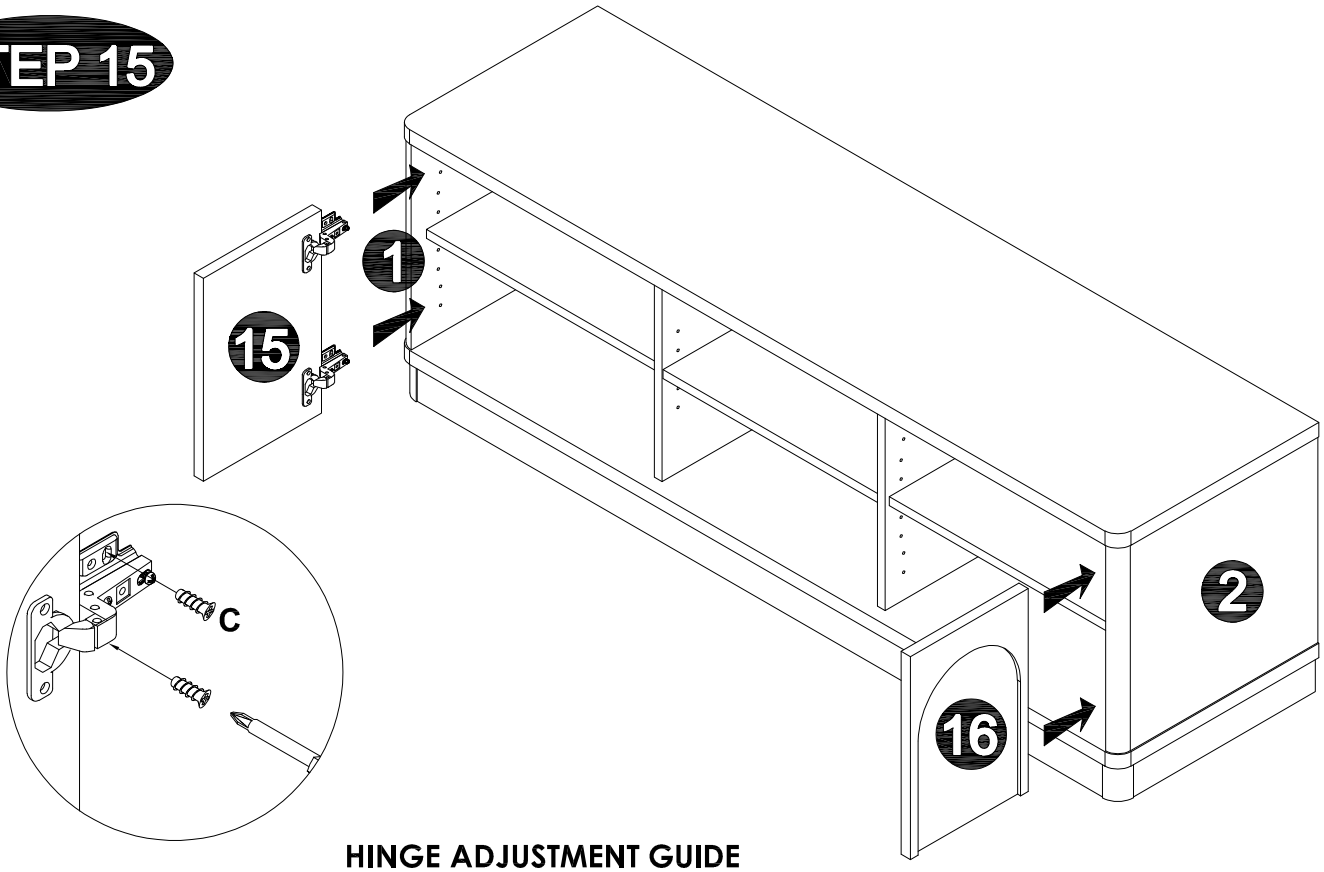


HINGE ADJUSTMENT GUIDE

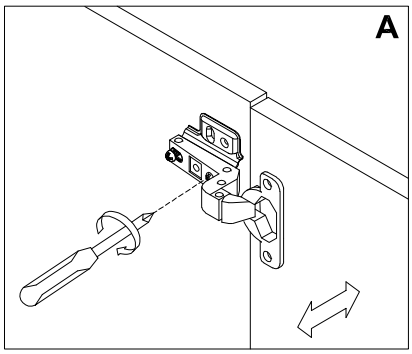

A. Lateral adjustment by screw adjusting

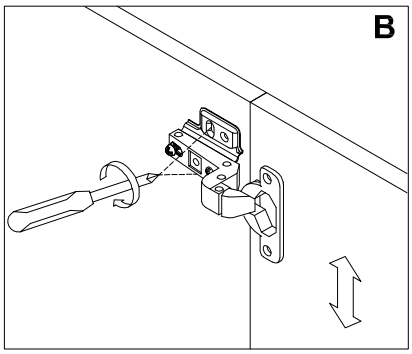


B. Vertical adjustment via slot in the mounting plate

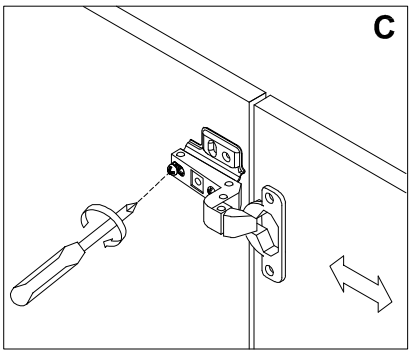


C. Front-to-Back by the slacking the hinge arm mounting screw


Step to adjust push-open mechanism

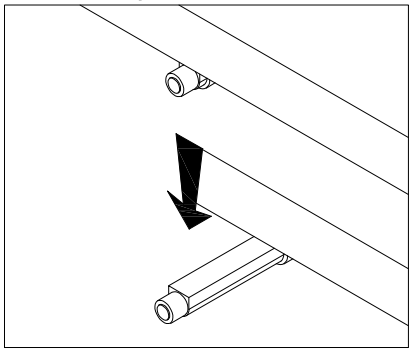


A. If the door does not open, push out the push-open mechanism at the panel.

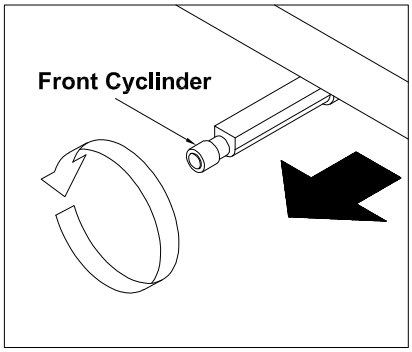

B. Turn front cylinder counterclockwise to increase, or clockwise to decrease the door step.

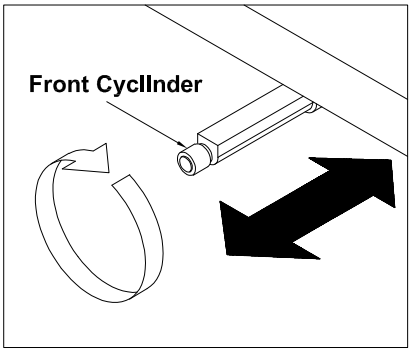


C. If the door step is uneven, adjust the front cylinder in or out until the step is even for all door.

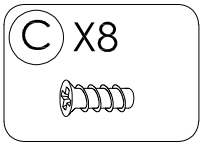



ASSEMBLY INSTRUCTION


DESCRIPTION:
7396
CRANFIELD TV UNIT

STEP 16

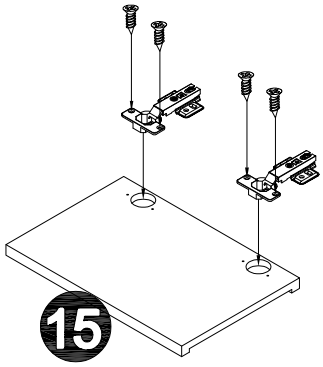

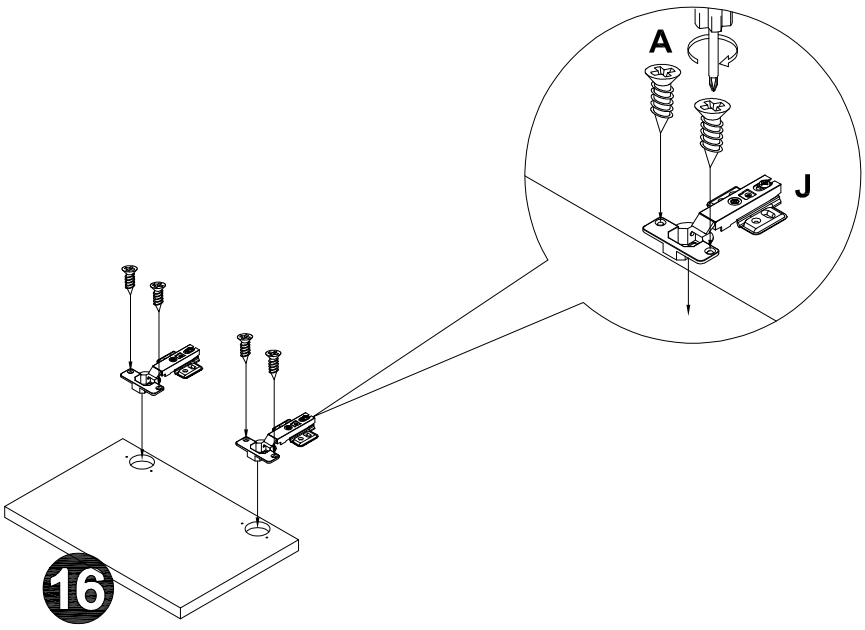

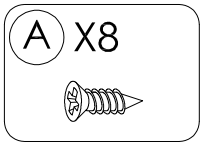


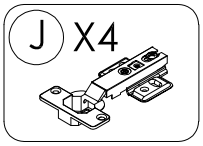


ASSEMBLY INSTRUCTION


DESCRIPTION:
7396
CRANFIELD TV UNIT

STEP 17

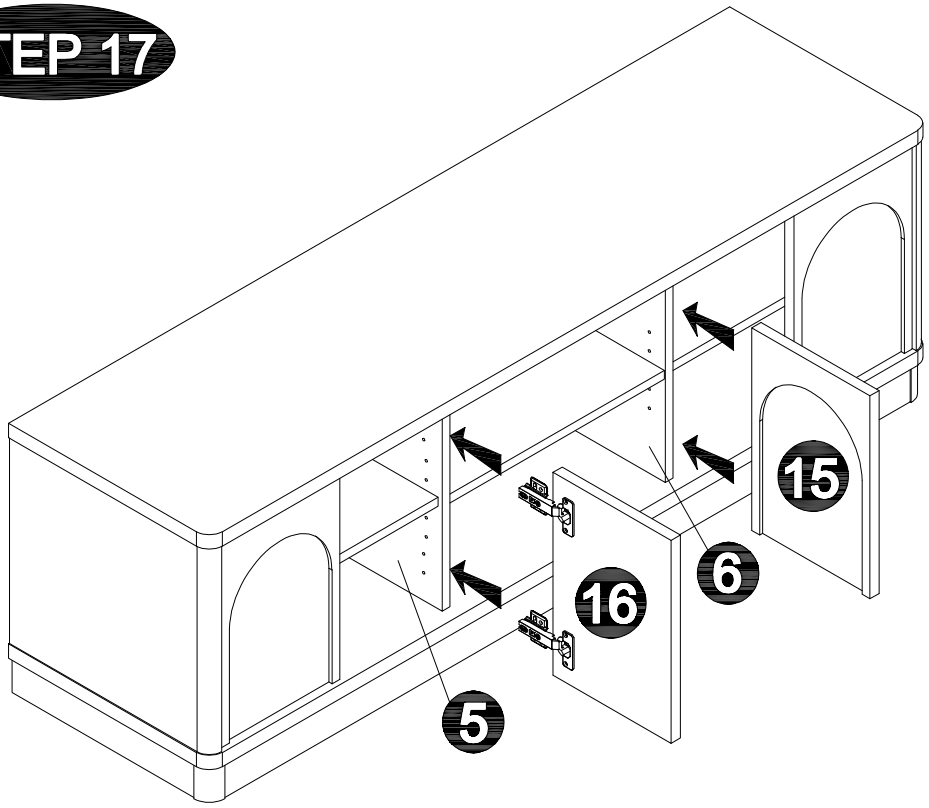


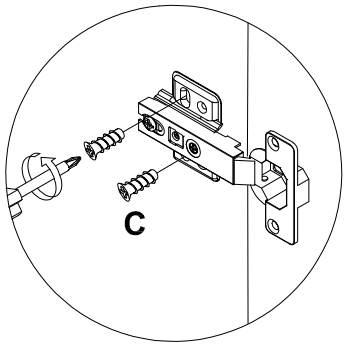


HINGE ADJUSTMENT GUIDE

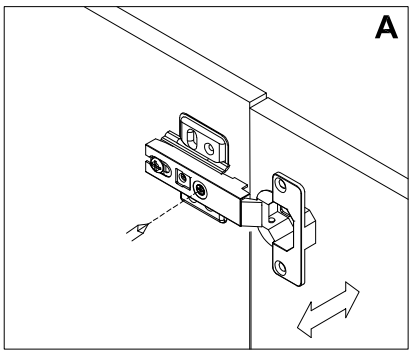

A. Lateral adjustment by screw adjusting

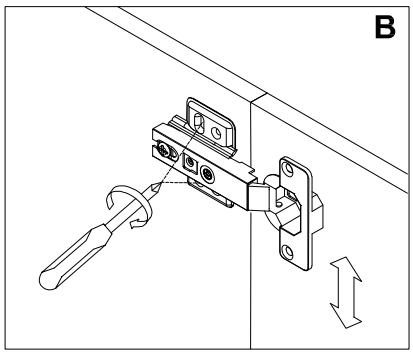


B. Vertical adjustment via slot in the mounting plate

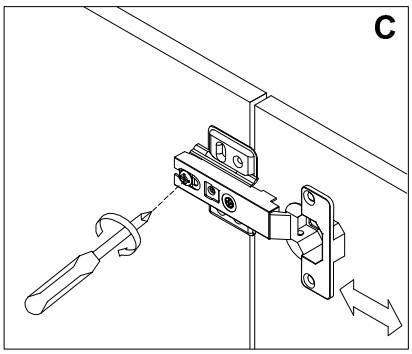


C. Front-to-Back by the slacking the hinge arm mounting screw


Step to adjust push-open mechanism

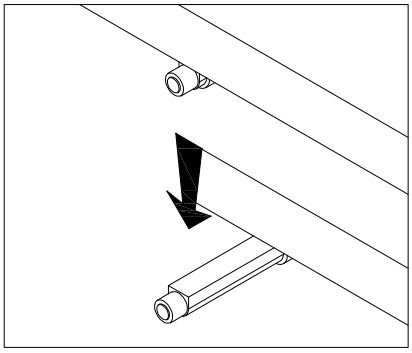


A. If the door does not open,push out the push-open mechanism at the panel.

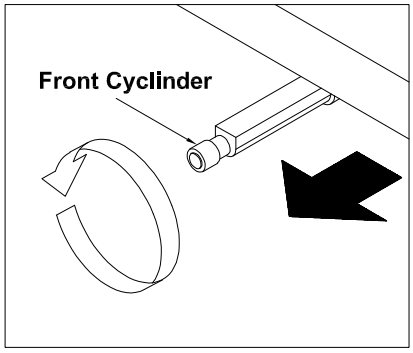

B. Turn front cylinder counterclockwise to increase, or clockwise to decrease the door step.

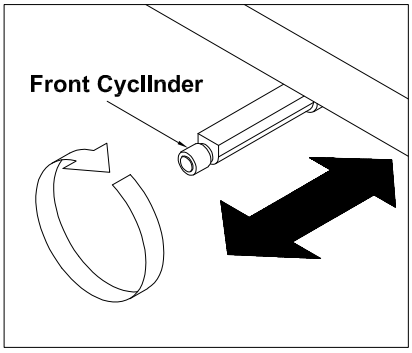


C. If the door step is uneven, adjust the front cylinder in or out until the step is even for all door.

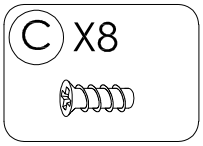



ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT

STEP 18

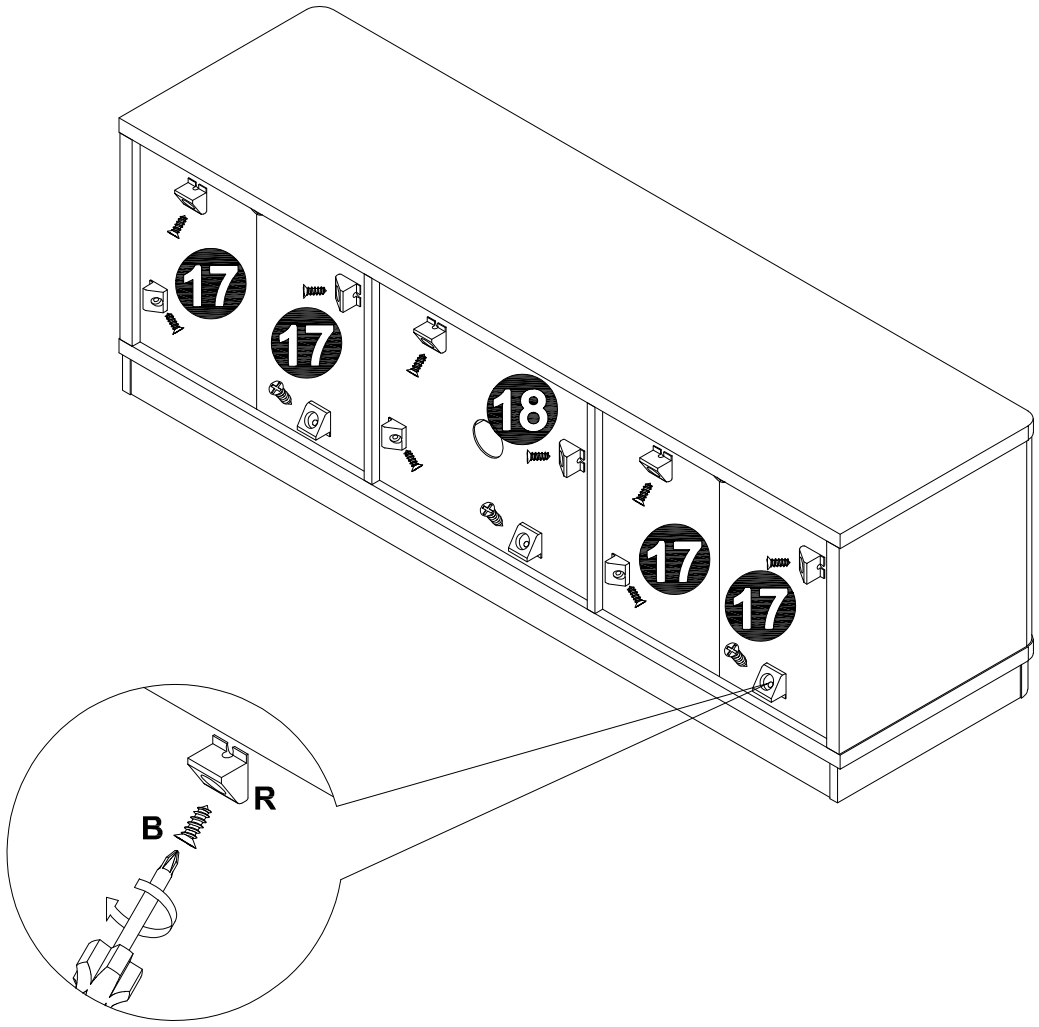

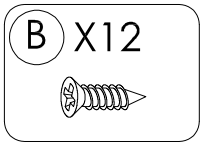

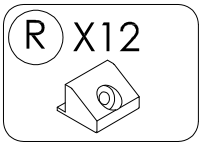

ASSEMBLY INSTRUCTION

DESCRIPTION:
7396
CRANFIELD TV UNIT

STEP 19

DIFFERENT WALL MATERIAL REQUIRE DIFFERENT TYPES OF FIXING DEVICES. USE FIXING DEVICES SUITABLE FOR THE WALLS IN YOUR HOME, SOLD SEPARATELY. PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT OF WHAT FIXING SHOULD BE USE..



WARNING, PLEASE READ TO Reduce the risk to toppling furniture

- NEVER open more than one drawer at the time.
- NEVER allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture.
- ALWAYS anchor this product to a wall or other suitable surface. check anchors regularly.
- Place heavy items in lower drawers
- Use of anti toppling restraints may only reduce, but will not eliminate the risk to tip over.

NEVER put a TV on this product.
For more information please visit www.productsafety.gov.au

Screw and wall plugs are not provided, please use appropriate fixtures for your wall.

WALL

