ASSEMBLY INSTRUCTION

DESCRIPTION

6012OAK

Miami **Bedside** Table


1.0hr


APPROXIMATE ASSEMBLY TIME


2 PERSON ASSEMBLY

FLOOR AREA
2MX2M

REQUIRED ASSEMBLY SPACE




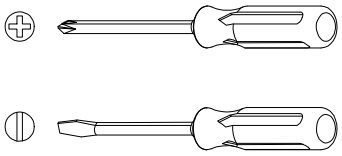

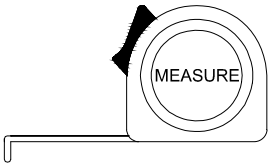

REQUIRED ASSEMBLY TOOLS

ASSEMBLED DIMENSIONS

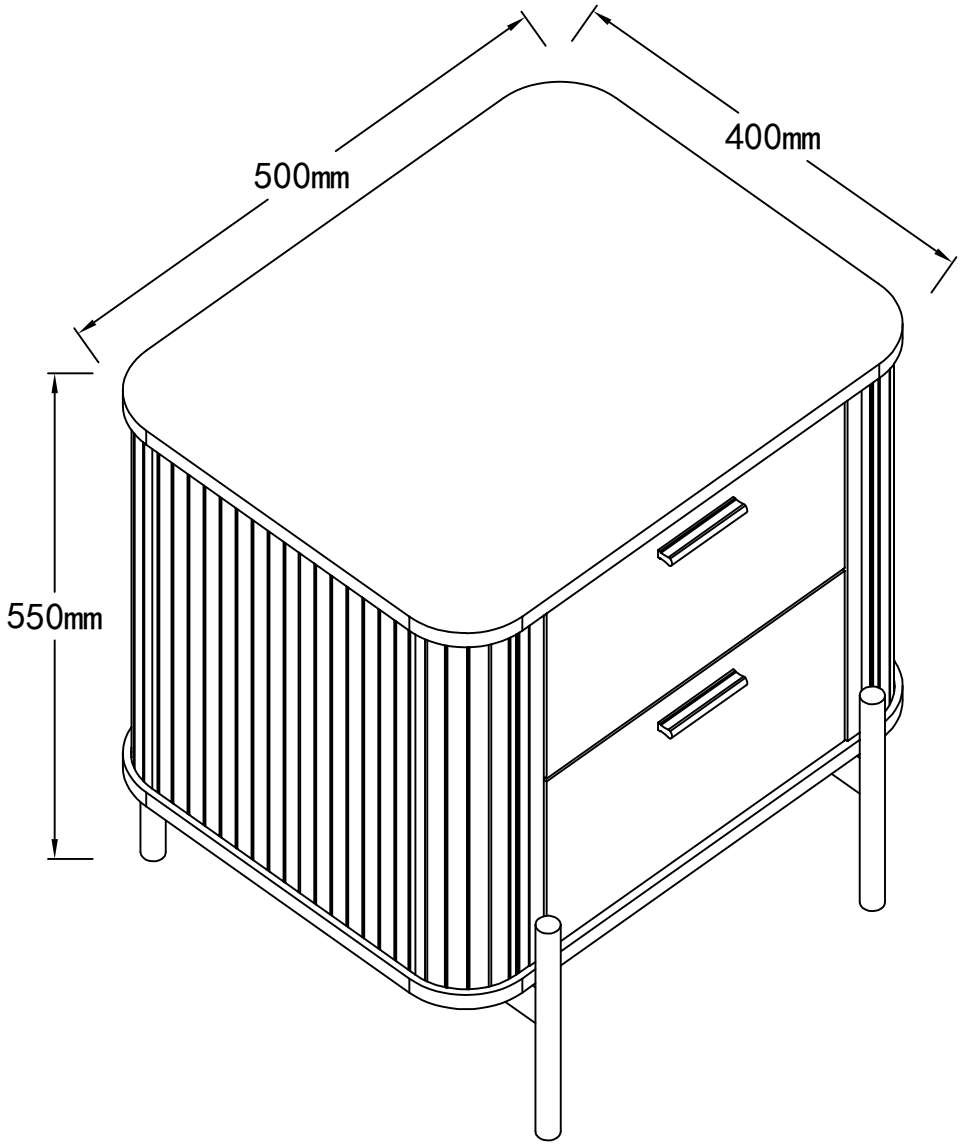


ASSEMBLY INSTRUCTION

DESCRIPTION

6012OAK

Miami **Bedside Table**

PARTS LIST

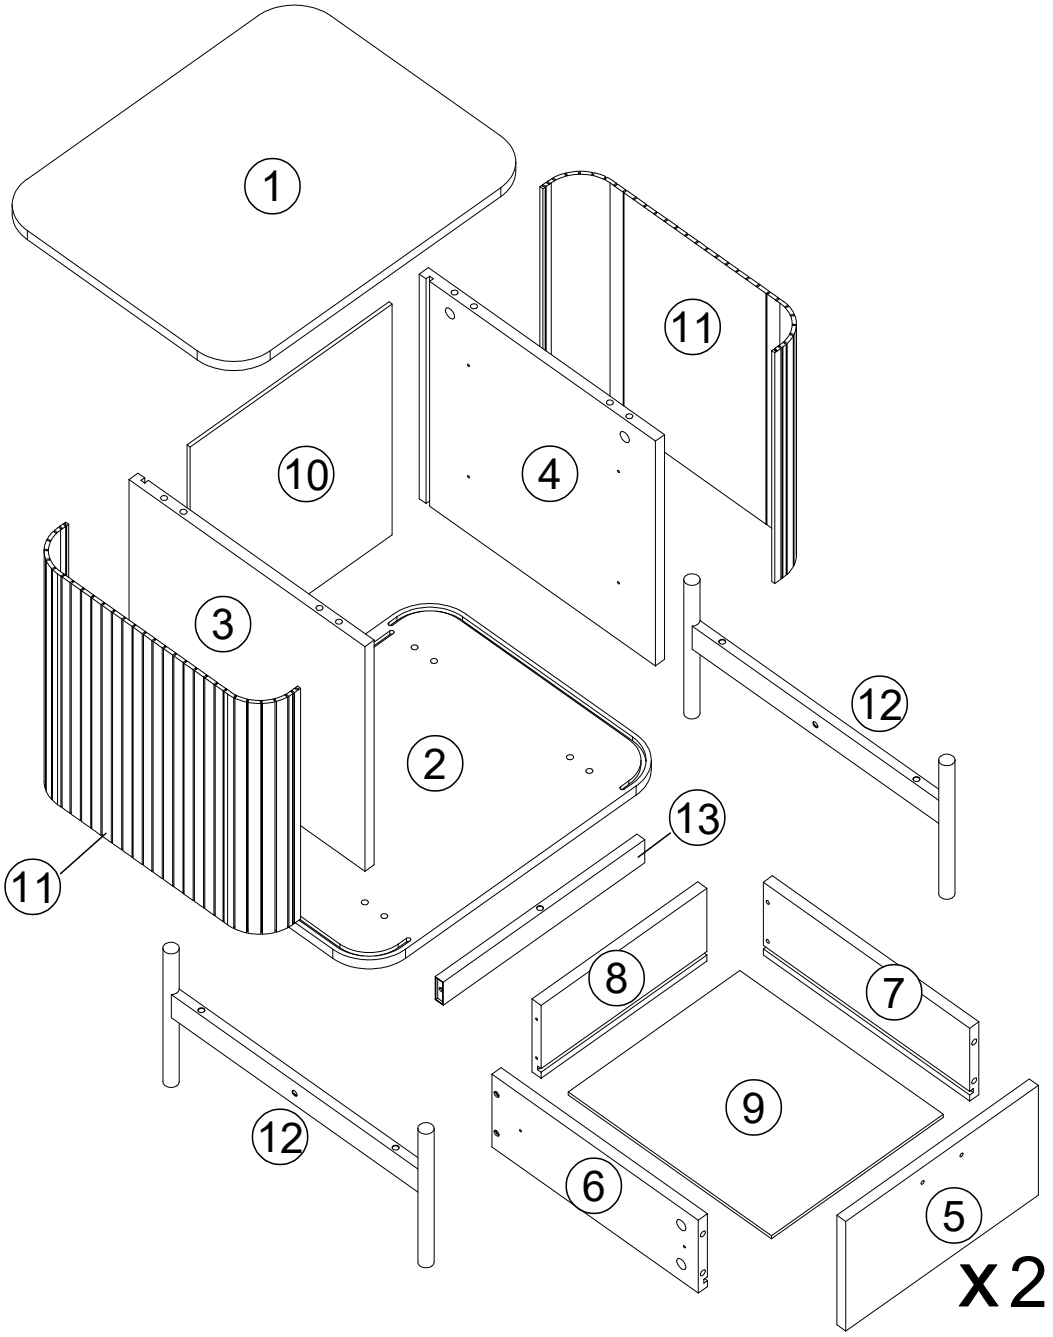

NO.PARTS LIST	QTY
(1) Part 1	1
(2) Part 2	1
(3) Part 3	1
(4) Part 4	1
(5) Part 5	2
(6) Part 6	2
(7) Part 7	2
(8) Part 8	2
(9) Part 9	2

NO.PARTS LIST	QTY
(10) Part 10	1
(11) Part 11	2
(12) Part 12	2
(13) Part 13	1

ASSEMBLY INSTRUCTION


DESCRIPTION

6012OAK

Miami **Bedside** T**able**

HARDWARE LIST

A x12	B x12	C x8	D x4	E x20	F x8	G x2	H x4
							
M6x35mm	Φ15mm	Φ8x30mm	M7x50mm	M3.5x14mm	Φ20mm		M4x18mm

I x4	J x2	K x5	L x4	M x4	N x1	O x8
						
	M6x30mm	M6x48mm			4mm	M4x35mm

ASSEMBLY INSTRUCTION

DESCRIPTION

6012OAK

Miami **Bedside Table**

Top Tips before you start!

1. Please check that all parts are present before you start the assembly of your furniture, as once assembled,the furniture is exempt from our home approval policy.

2. For ease and speed of assembly,we recommend that before you commence each step of the assembly,that you identify all the parts required for that step.

3. For larger items,please ensure that you have sufficient space and people(as indicated on page 1) to assemble your product safely.

4. We recommend that,where possible,all items are assembled near to the area in which they will be placed in use,to avoid moving the product unnecessarily once assembled.

5. For the protection of your furniture,particularly items of high gloss finish,we recommend that the product is placed on a protected surface during assembly to prevent any damage.

6. During assembly please take care not to over-tighten any fittings,as this may damage the product.

Care and Maintenance of your Furniture

- Please periodically check all fittings and re-tighten as necessary.
- Please do not drag or pull your furniture.
- Wipe occasionally with a soft cloth slightly dampened with water.Then buff with a dry clean soft cloth.
- Never allow any kind of liquid to remain on your furniture.Absorption can cause wood to warp or finishes to de-laminate.
- Please do not sit or stand on this item.

ASSEMBLY INSTRUCTION


DESCRIPTION


6012OAK


Miami **Bedside** Table

SPECIAL TIPS FOR FITTING CAM-LOCKS AND CAM-BOLTS

CAM-LOCK

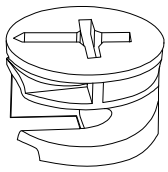


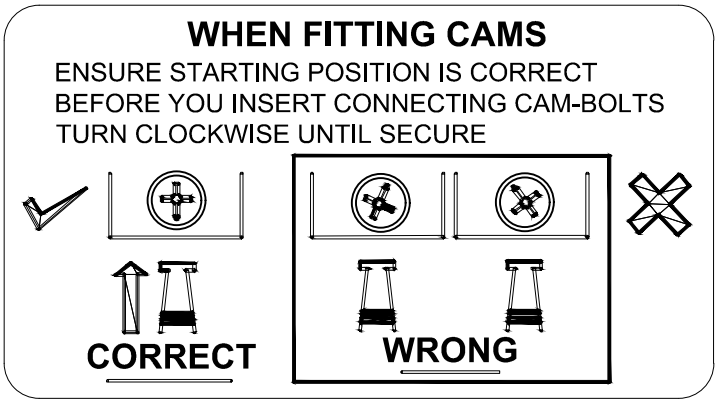


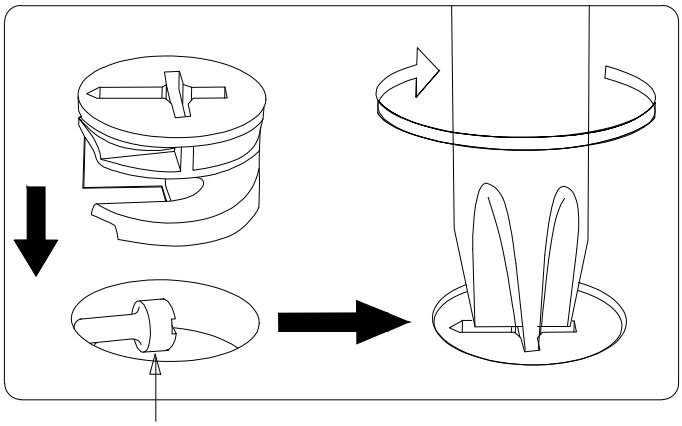

CAM-BOLT

Tighten until shoulder is flush with panel.Do not overtighten or undertighten (see example below)

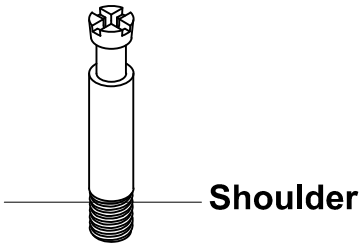

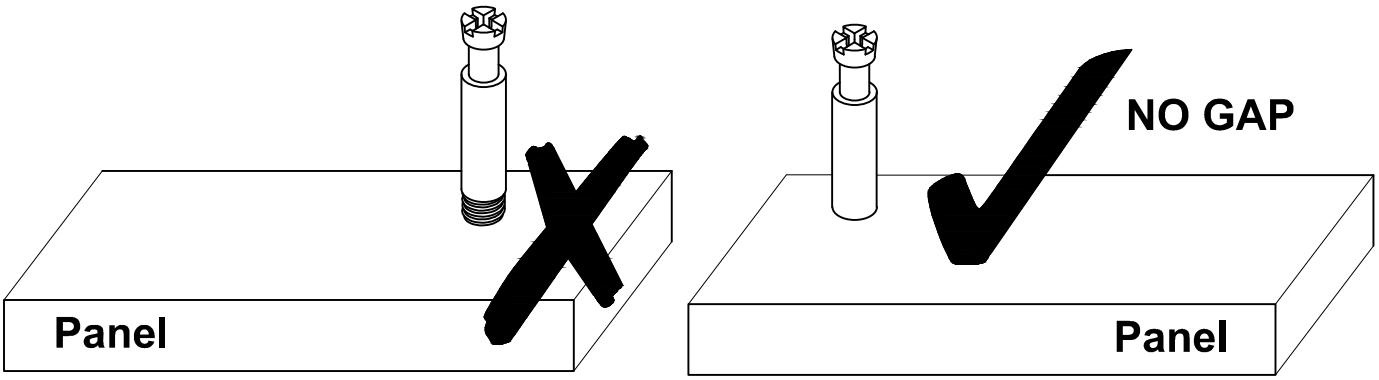


ASSEMBLY INSTRUCTION

DESCRIPTION

6012OAK

Miami Bedside Table

STEP 1

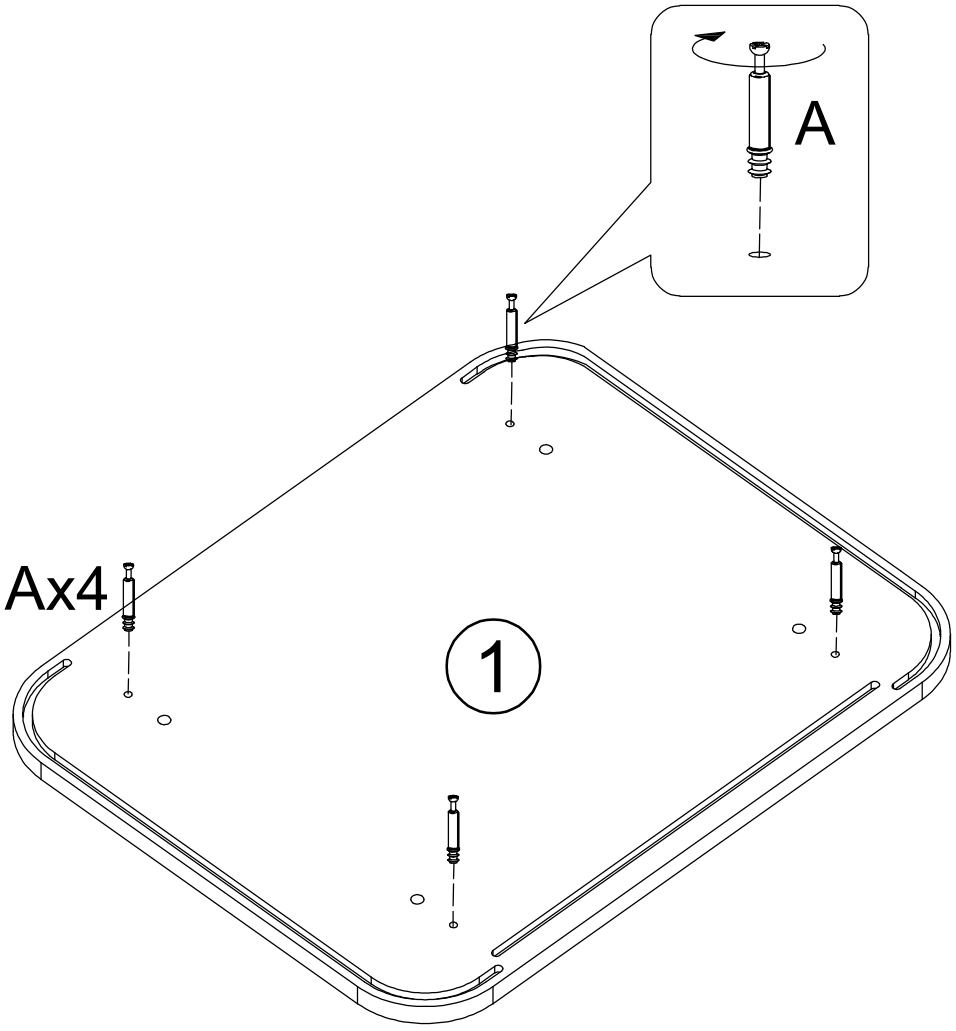

A	x4
	
M6x35mm	


ASSEMBLY INSTRUCTION


DESCRIPTION

6012OAK

Miami **Bedside** Table

STEP 2

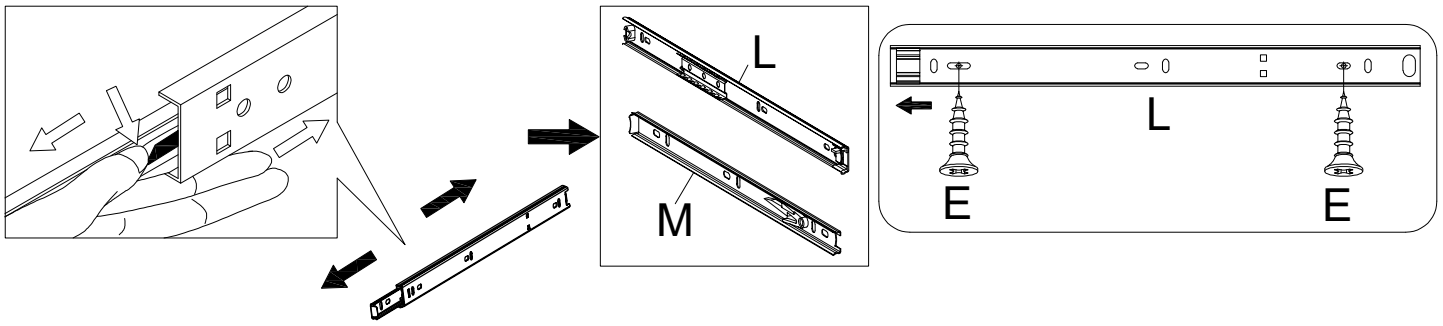

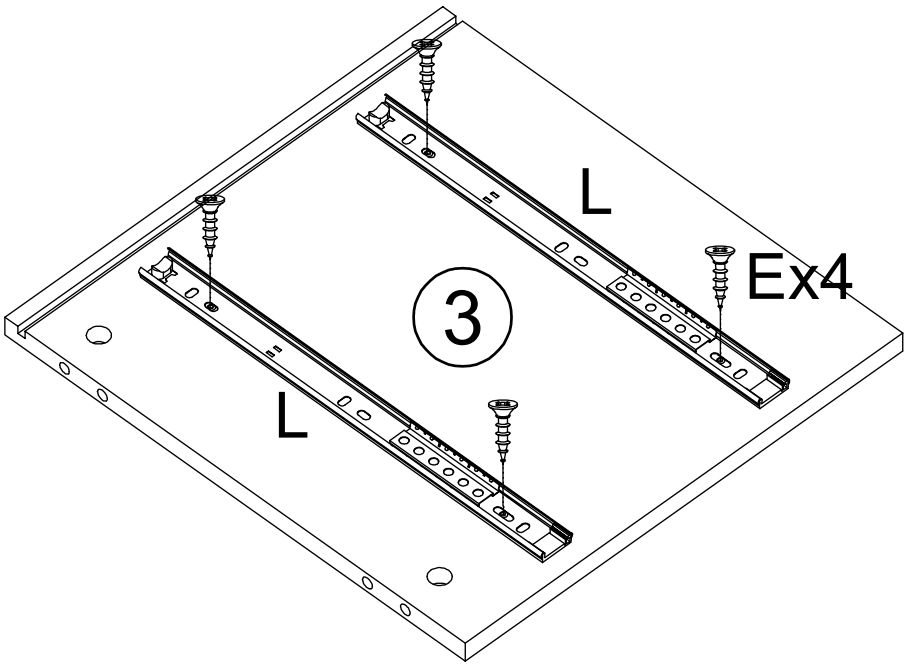

E	x4	L	x2
M3.5x14mm			


ASSEMBLY INSTRUCTION


DESCRIPTION

6012OAK

Miami **Bedside** T**able**

STEP 3

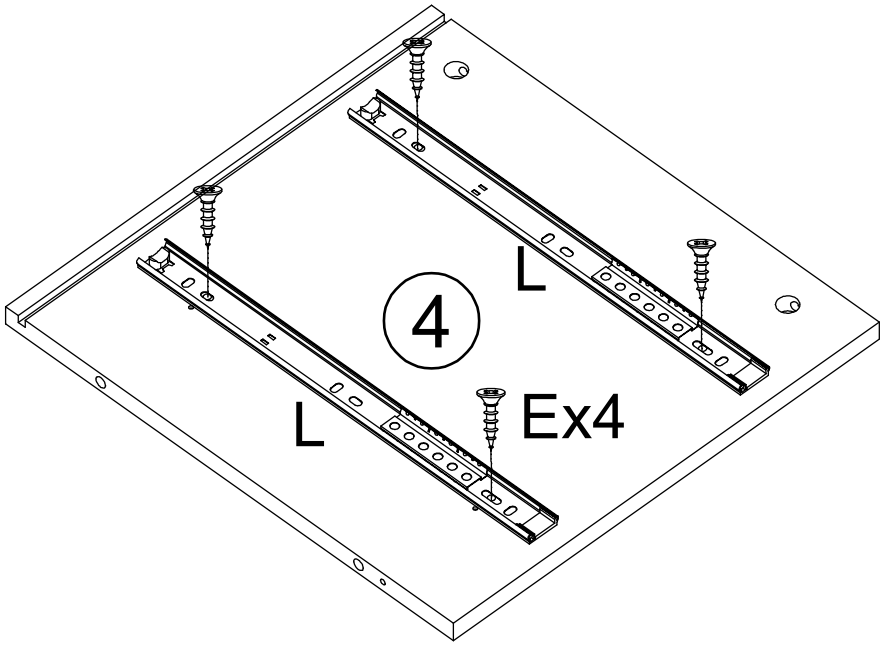

E	x4	L	x2
			
M3.5x14mm			


ASSEMBLY INSTRUCTION

DESCRIPTION

6012OAK

Miami **Bedside** T**able**

STEP 4

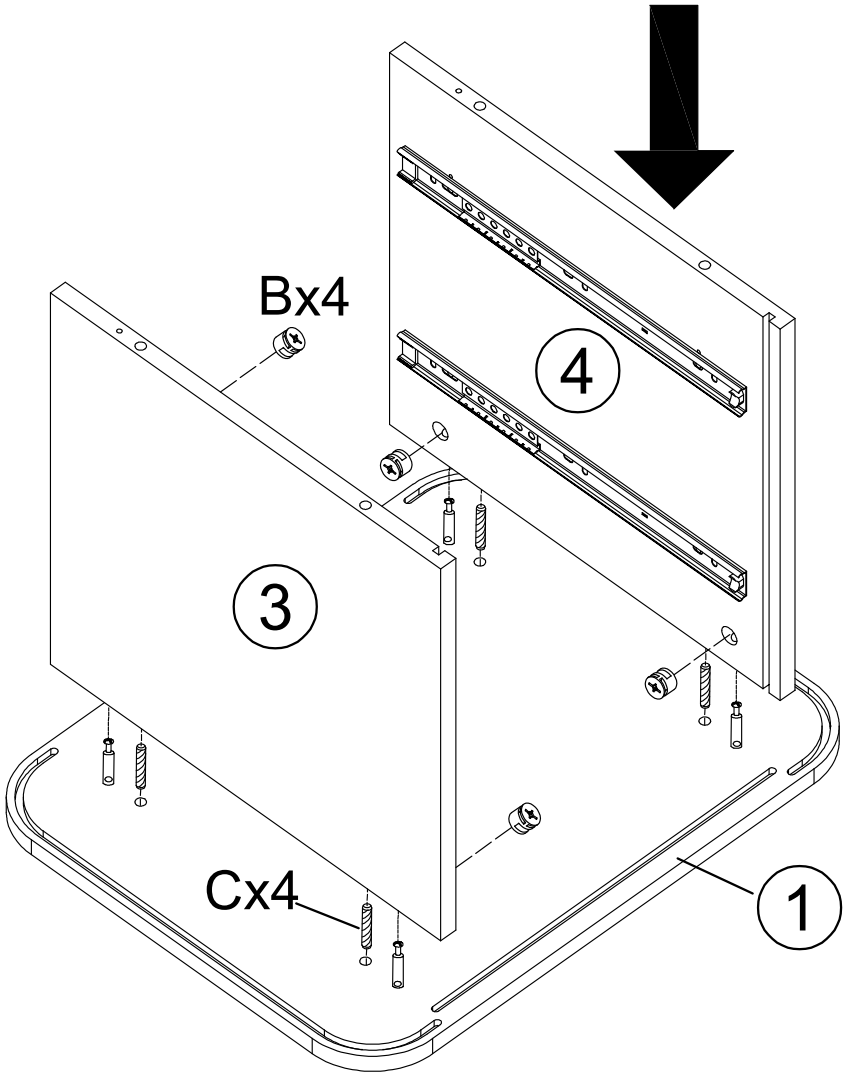

B	x4	C	x4
			
Φ15mm		Φ8x30mm	


ASSEMBLY INSTRUCTION

DESCRIPTION

6012OAK

Miami **Bedside Table**

STEP 5

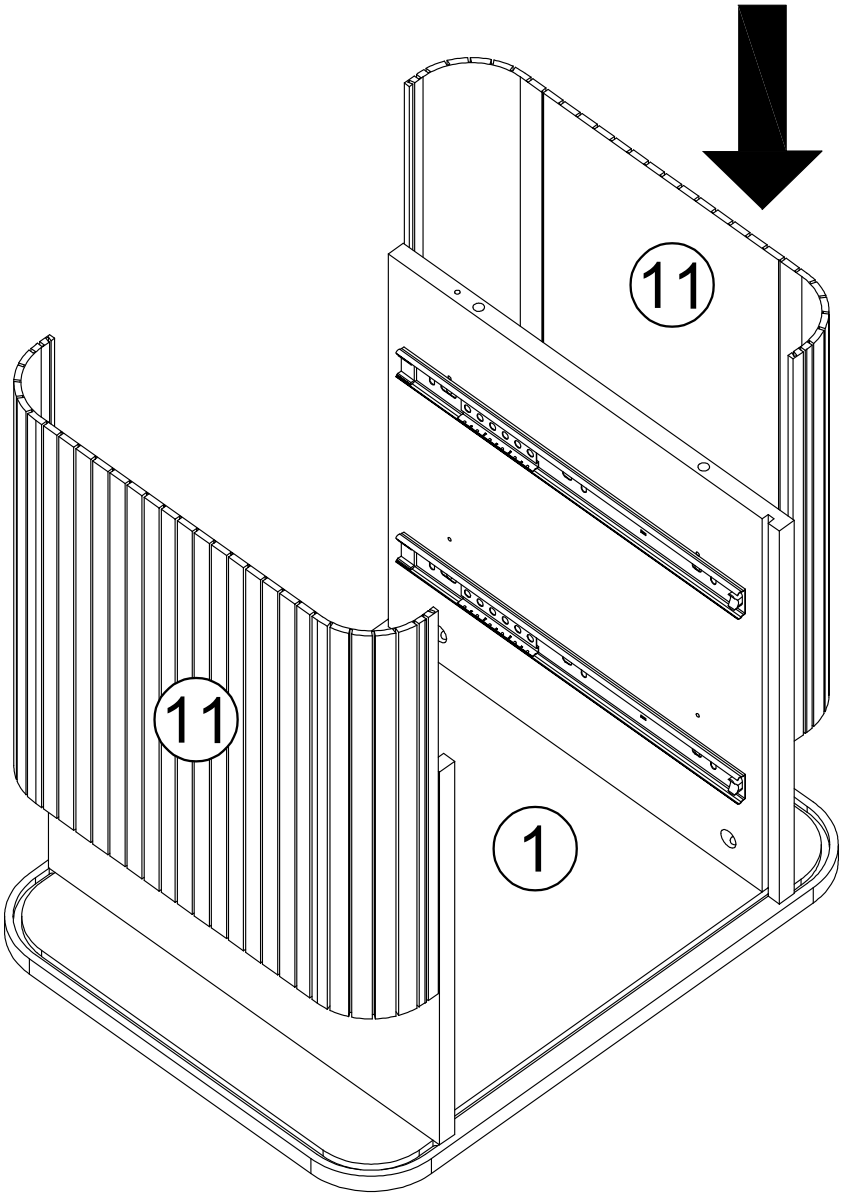


ASSEMBLY INSTRUCTION

DESCRIPTION

6012OAK

Miami **Bedside** Table

STEP 6

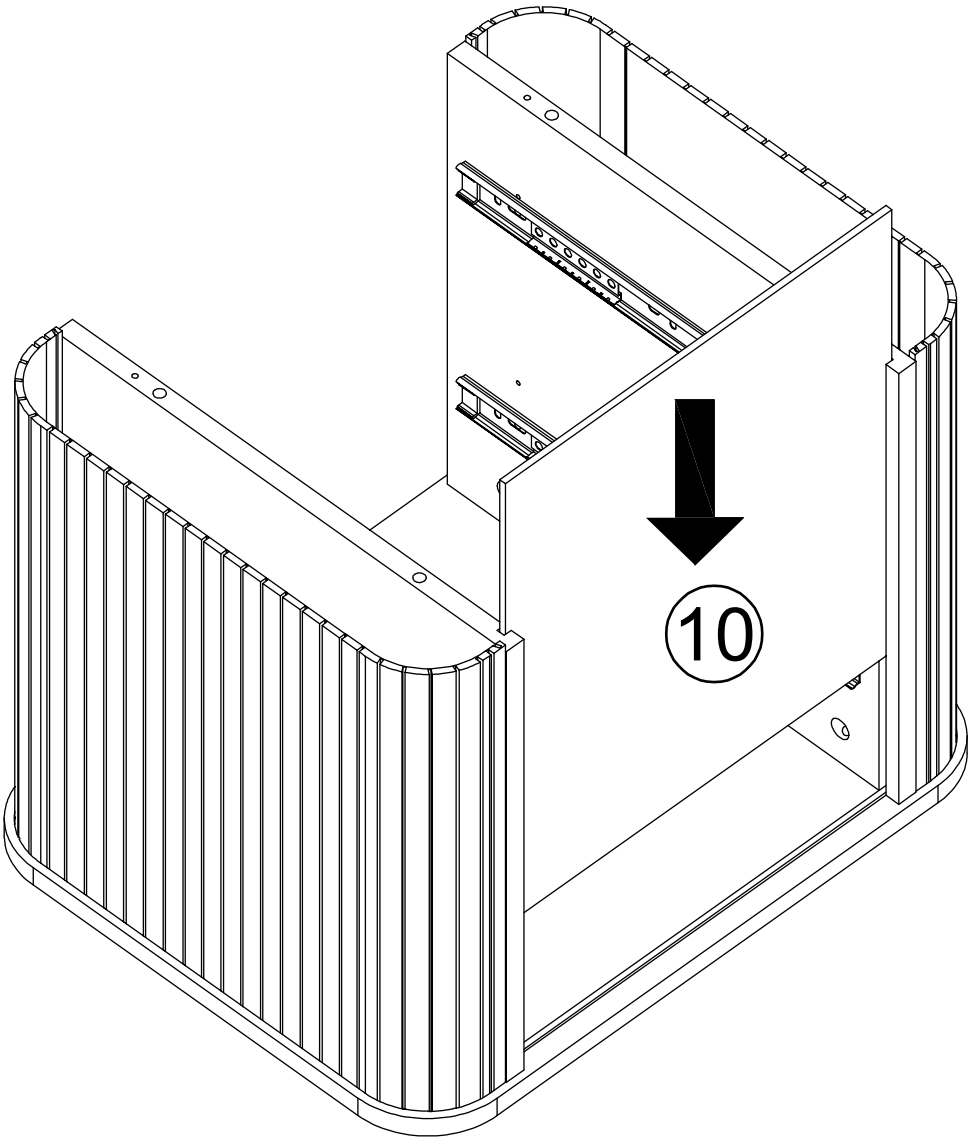


ASSEMBLY INSTRUCTION


DESCRIPTION

6012OAK

Miami **Bedside Table**

STEP 7

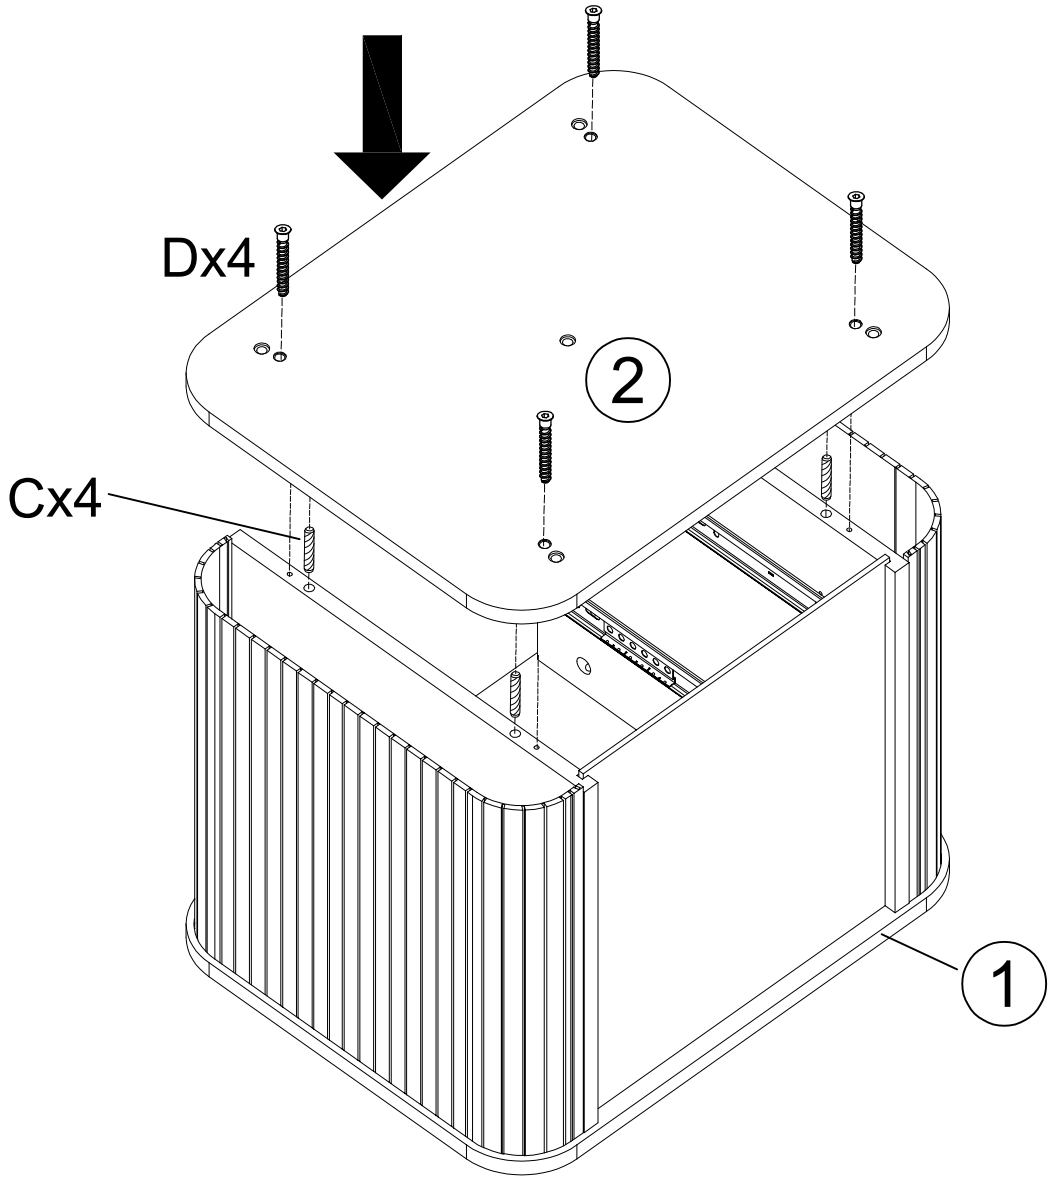

C	x4	D	x4	N	x1
					
Φ8x30mm		M7x50mm		4mm	


ASSEMBLY INSTRUCTION

DESCRIPTION

6012OAK

Miami **Bedside Table**

STEP 8

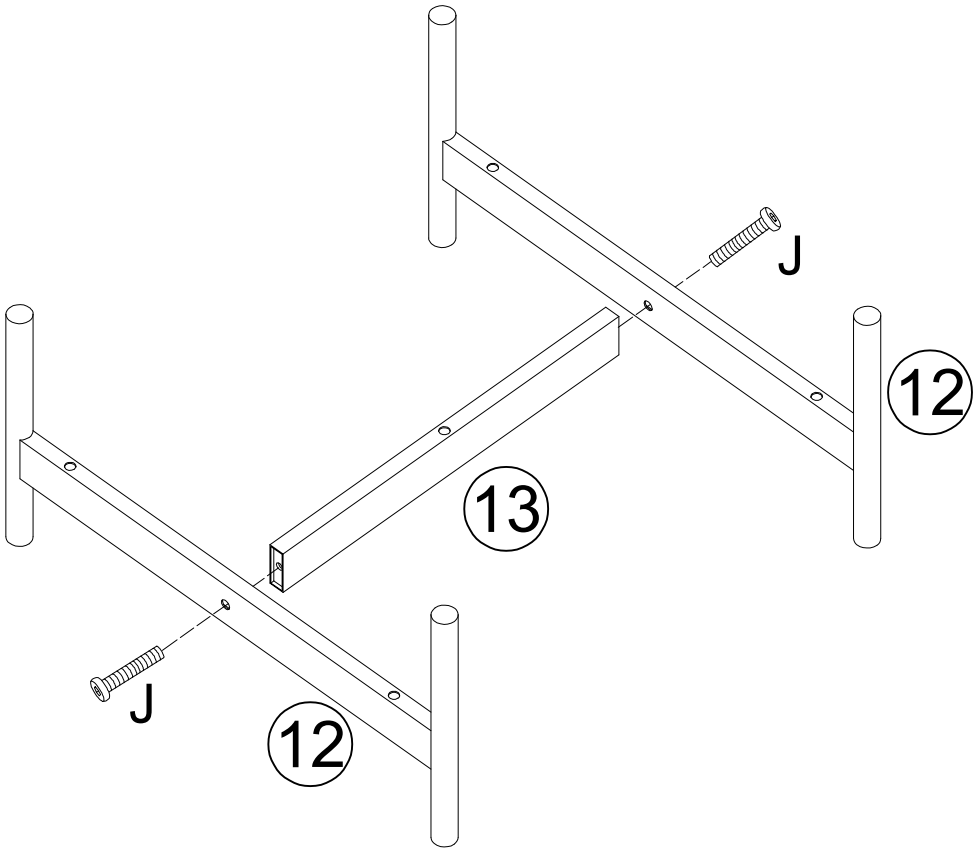

J	x2	N	x1
			
M6x30mm		4mm	


ASSEMBLY INSTRUCTION


DESCRIPTION

6012OAK

Miami Bedside Table

STEP 9

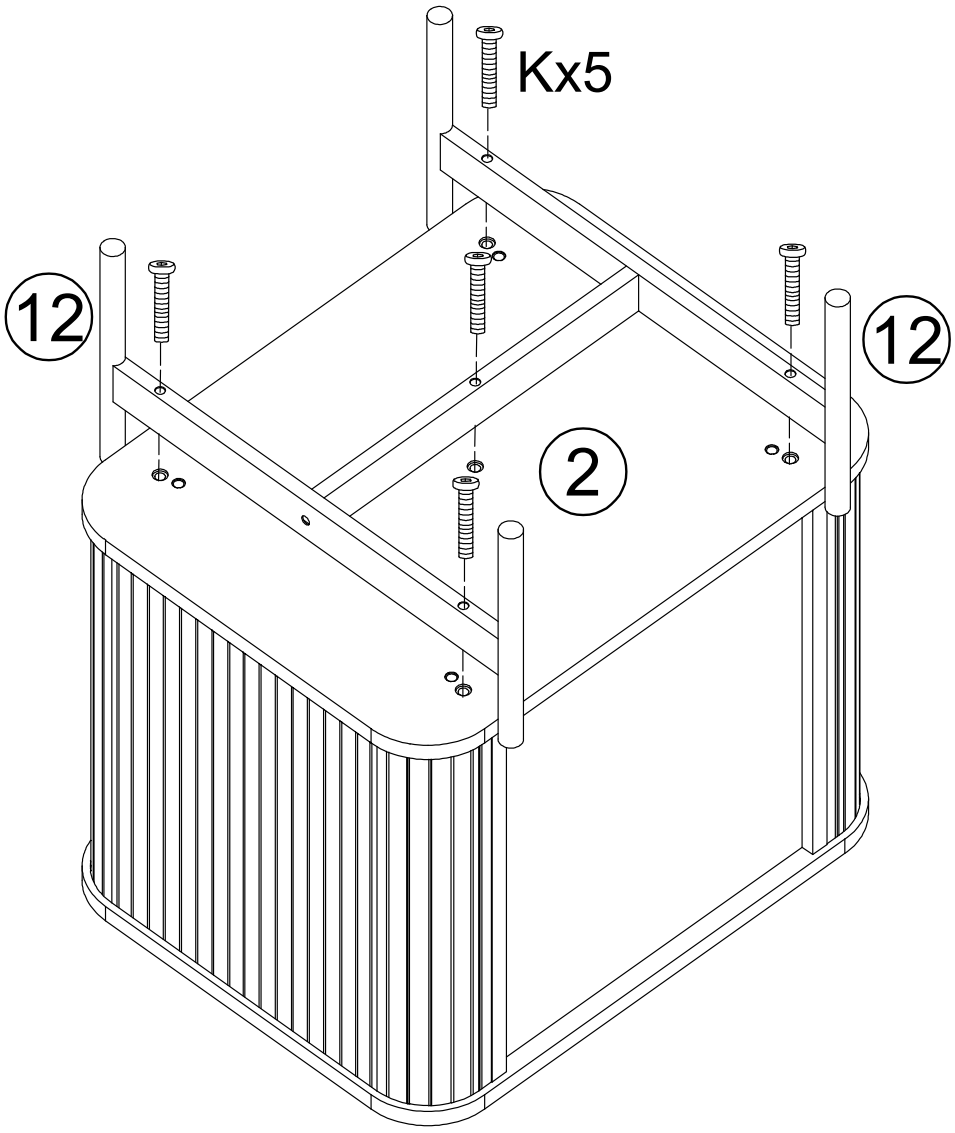

K	x5	N	x1
			
M6x48mm		4mm	


ASSEMBLY INSTRUCTION

DESCRIPTION

6012OAK

Miami **Bedside** T**able**

STEP10

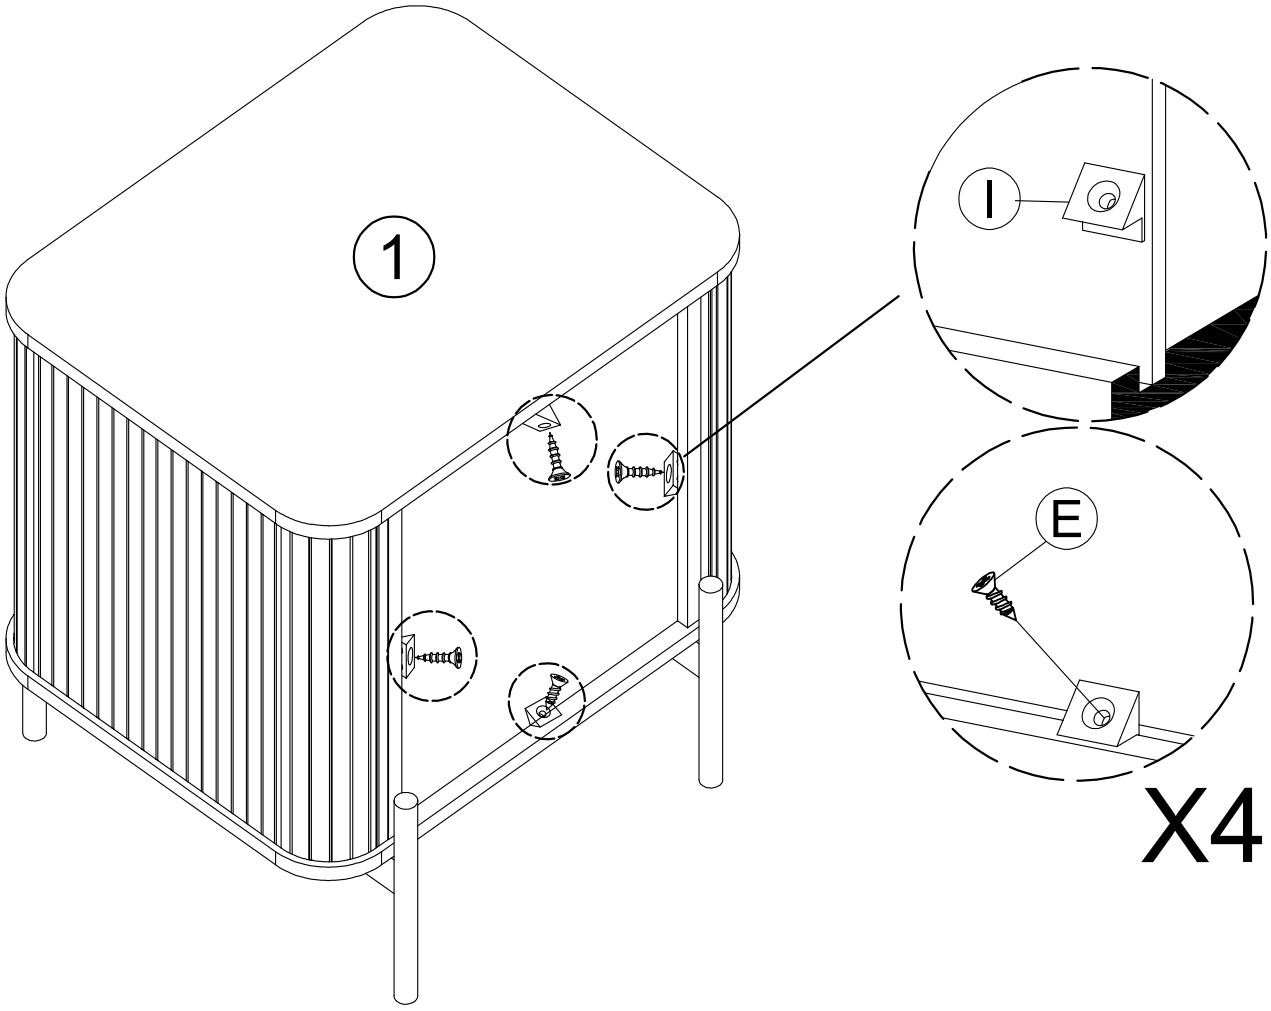

I	x4	E	x4
			
			M3.5x14mm


ASSEMBLY INSTRUCTION

DESCRIPTION


6012OAK

Miami **Bedside Table**



STEP11

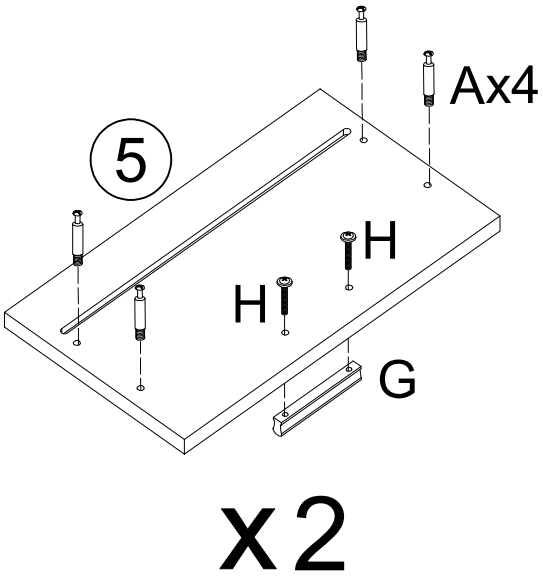

x2

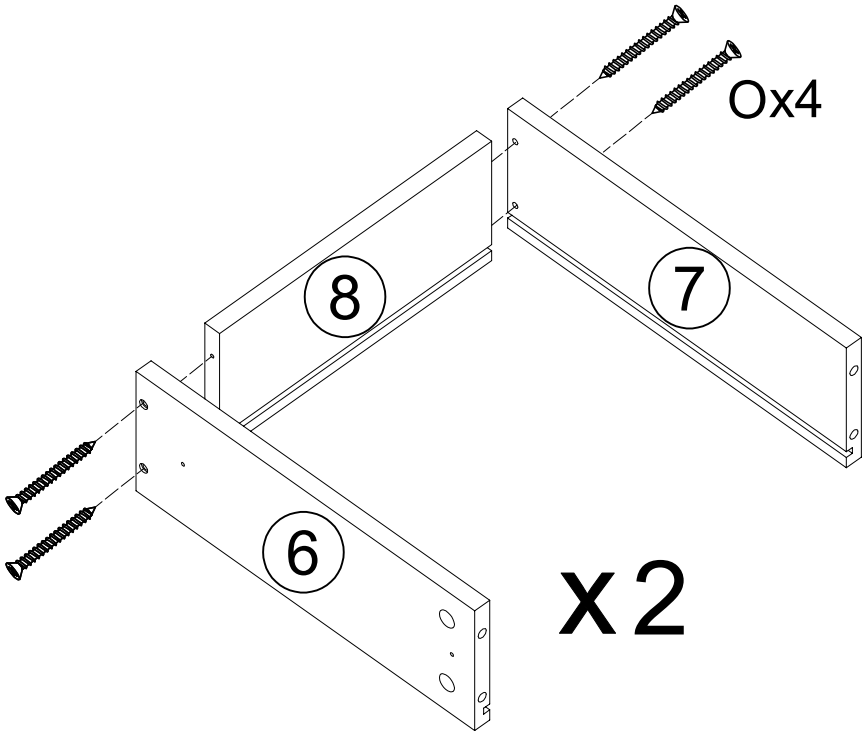

x2

A	x8	G	x2	H	x4	O	x8
							
M6x35mm				M4x18mm		M4x35mm	


ASSEMBLY INSTRUCTION


DESCRIPTION

6012OAK

Miami **Bedside** Table

STEP12

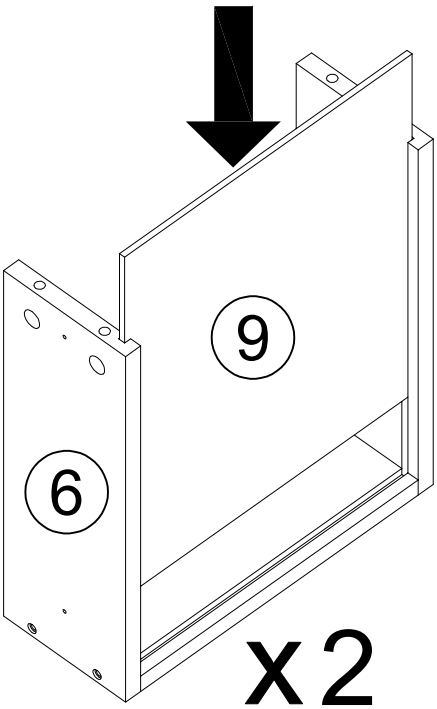

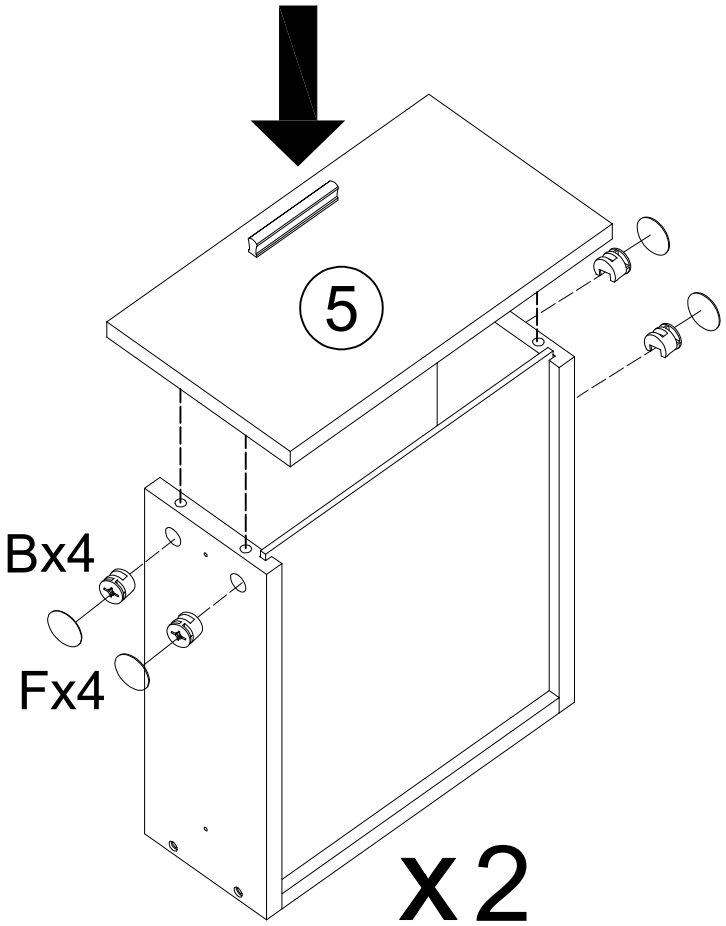

B	x8	F	x8
			
Φ15mm		Φ20mm	


ASSEMBLY INSTRUCTION


DESCRIPTION

6012OAK

Miami **Bedside** Table

STEP13

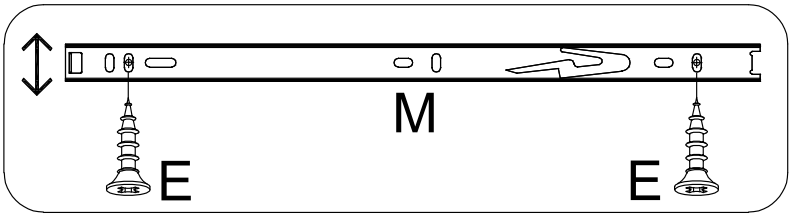

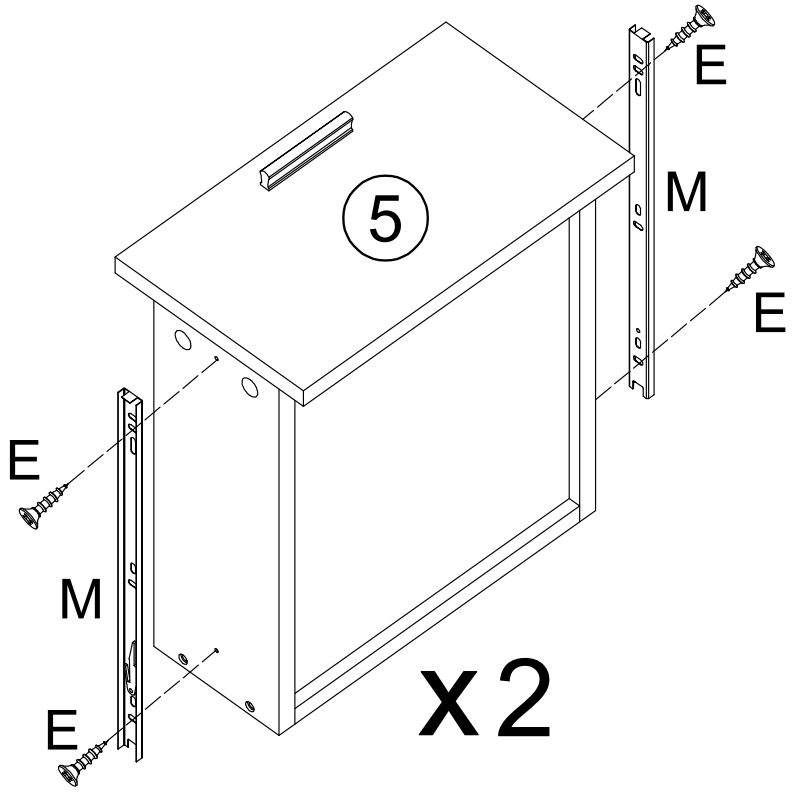

E	x8	M	x4
M3.5x14mm			

ASSEMBLY INSTRUCTION

DESCRIPTION

6012OAK

Miami **Bedside** T**abl**e

STEP14

